TELETYPESETTER®

BULLETIN 50B

PARTS FOR THE STANDARD PERFORATOR

FAIRCHILD
GRAPHIC EQUIPMENT
A DIVISION OF FAIRCHILD CAMERA AND INSTRUMENT CORPORATION

221 FAIRCHILD AVENUE, PLAINVIEW, L.I., N.Y.

TELETYPESETTER®

BULLETIN 50B

PARTS FOR THE

STANDARD PERFORATOR

FAIRCHILD

GRAPHIC EQUIPMENT

A DIVISION OF FAIRCHILD CAMERA AND INSTRUMENT CORPORATION

221 FAIRCHILD AVENUE, PLAINVIEW, L.I., N.Y.

Copyright 1961 by Fairchild Camera and Instrument Corp. Copyright in all countries participating in International Convention and Pan American Conventions. All rights reserved including rights of translations into all languages.

Printed in U.S.A.

LIST OF EFFECTIVE PAGES


OCTOBER 1963

PAGE NUMBERS	CHANGE IN EFFECT	PAGE NUMBERS	CHANGE IN EFFECT
TITLE PAGE	CHANGE 1	13 and 14	CHANGE 3
A	CHANGE 4	15 and 16	CHANGE 2
B	CHANGE 2	17	CHANGE 3
1 and 2	CHANGE 2	18	CHANGE 2
3 and 4	CHANGE 3	19 and 20	CHANGE 1
5 to 8	CHANGE 2	21	CHANGE 3
9	CHANGE 1	22	CHANGE 2
10 and 11	CHANGE 3	23	CHANGE 3
12	CHANGE 2	24 to 26	DELETED


The above list indicates the effective pages as of the date of issue. When a change takes place in any of the following pages, this page likewise changes.

ALPHABETICAL INDEX


	Page
Base Assembly	1, 2
Chad Box and Chad Chute	12
Contact Bracket and Operating Bail Assembly	10
Copy Holder Assembly	14
Counting Clutch Shaft Assembly	4
Counting Code Levers	6
Counting Selector Bar Links	7
Counting Selector Bars	7
Cover Assembly	14
Electrical Clutch Trip Mechanism Assembly	17
Shaft and Bearing Assembly	5
Indicator Scale Assembly	9
Lamp and Socket	10
Main Clutch Shaft Assembly	3
Motors and Accessories	15, 16
Motor Cable Assembly	12
Numerical Index	21, 22, 23, 24, 25, 26
Old Style Pointer Drive	10
Perforating Selector Bars	6
Perforating Selector Bars Assembly	6
Perforator Selector Bar Arrangements	18
Pointer Drive Shaft Assembly and Gear	7
Pointer Unit Assembly	9
Punch Hammer Operating Lever	12
Punch Unit Assembly	11
Punch Unit Cover (Upper and Lower)	12
Return Clutch Lever Assembly	7
Shift-Unshift Mechanism	6
Space Band Cross Bar Assembly	9
Space Band Pointer Adjusting Assembly	8
Tape Container Assembly	13
Terminal Block Assembly	10
Tools	20
Veeder-Root Line Counter	14

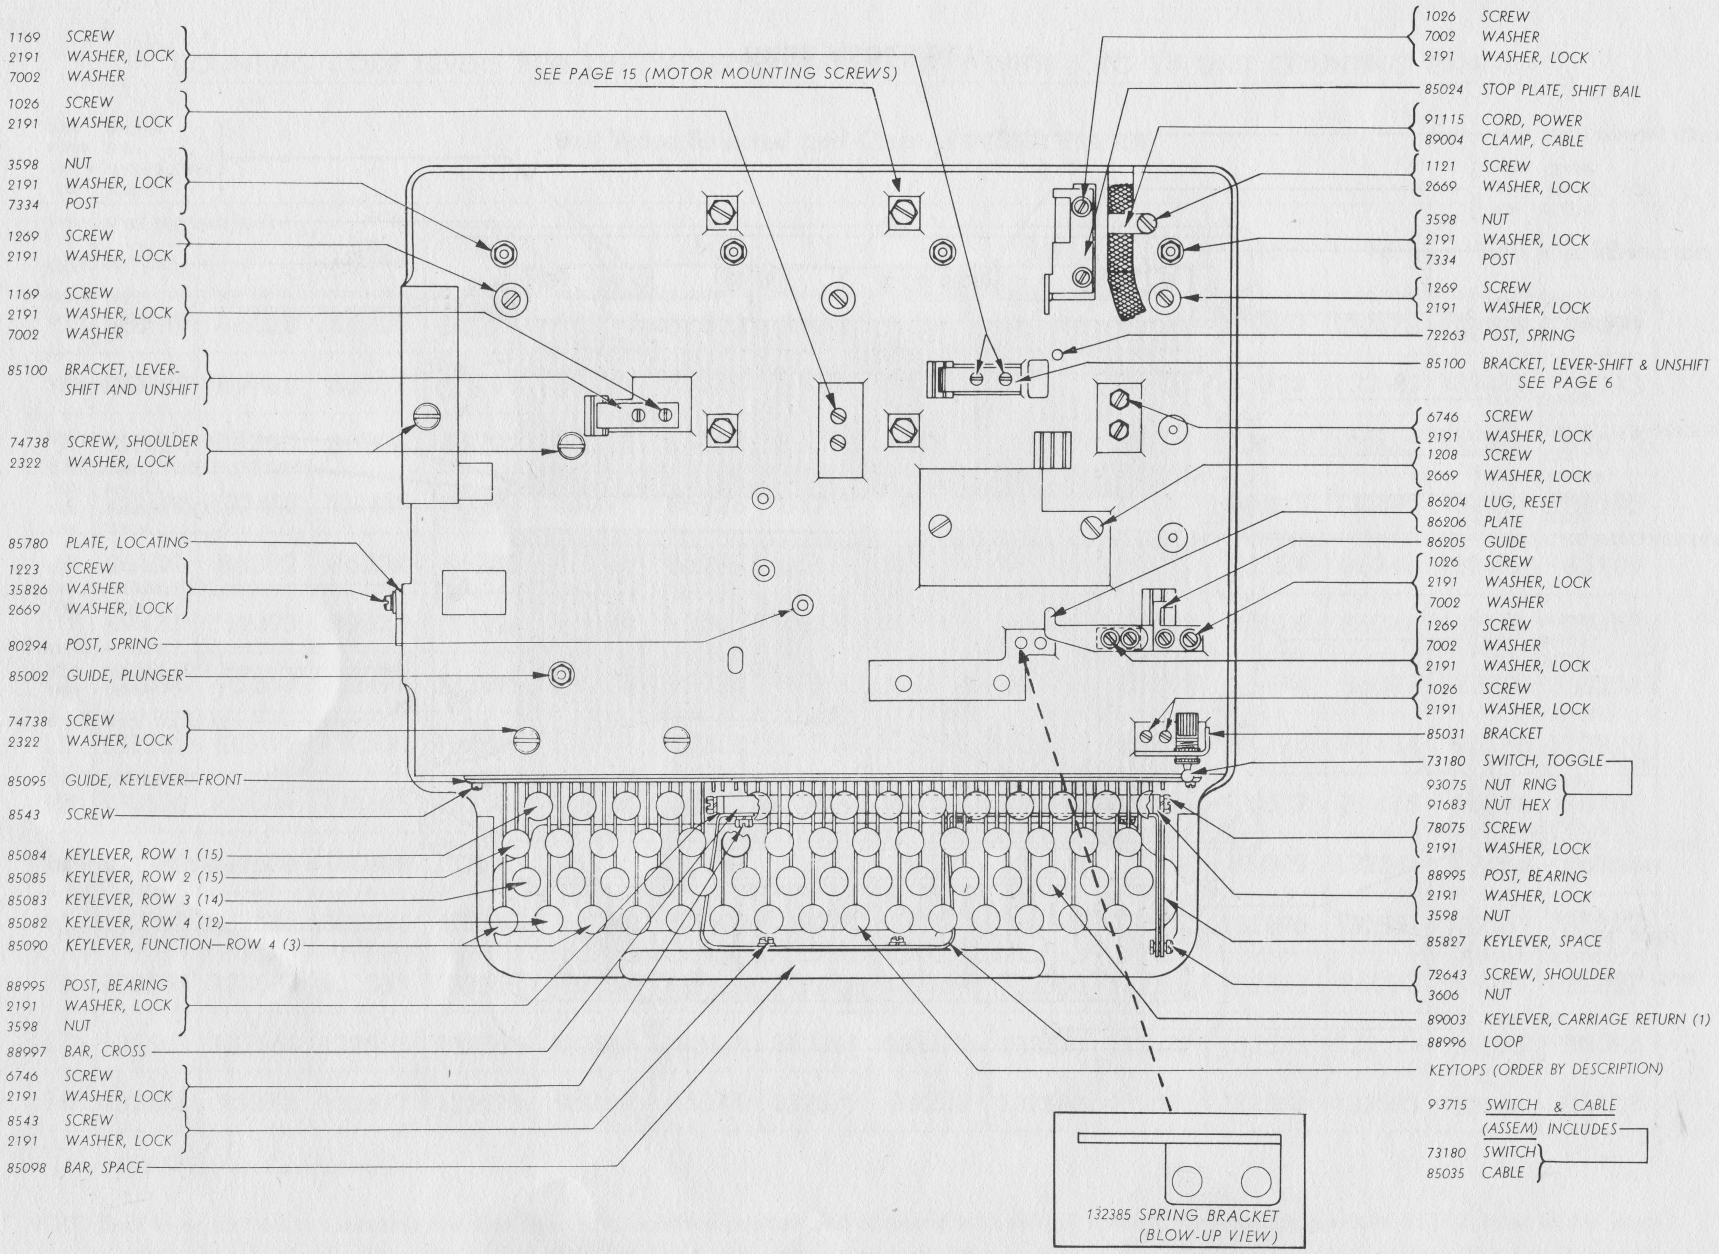


BASE ASSEMBLY

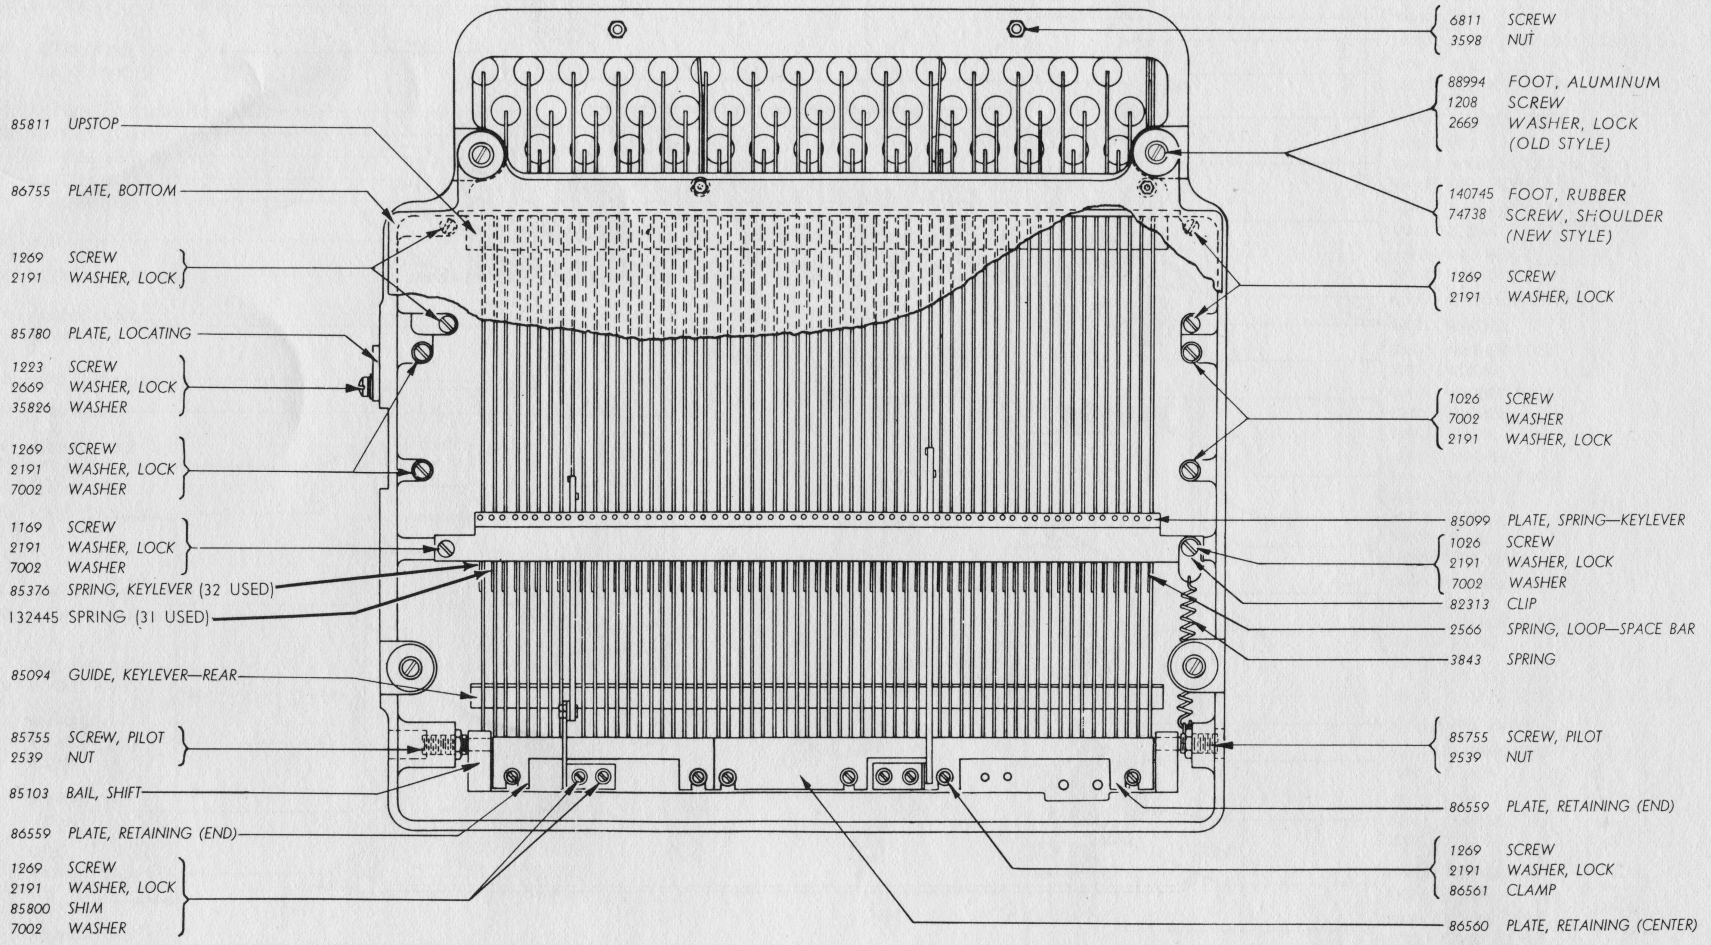


BASE ASSEMBLY

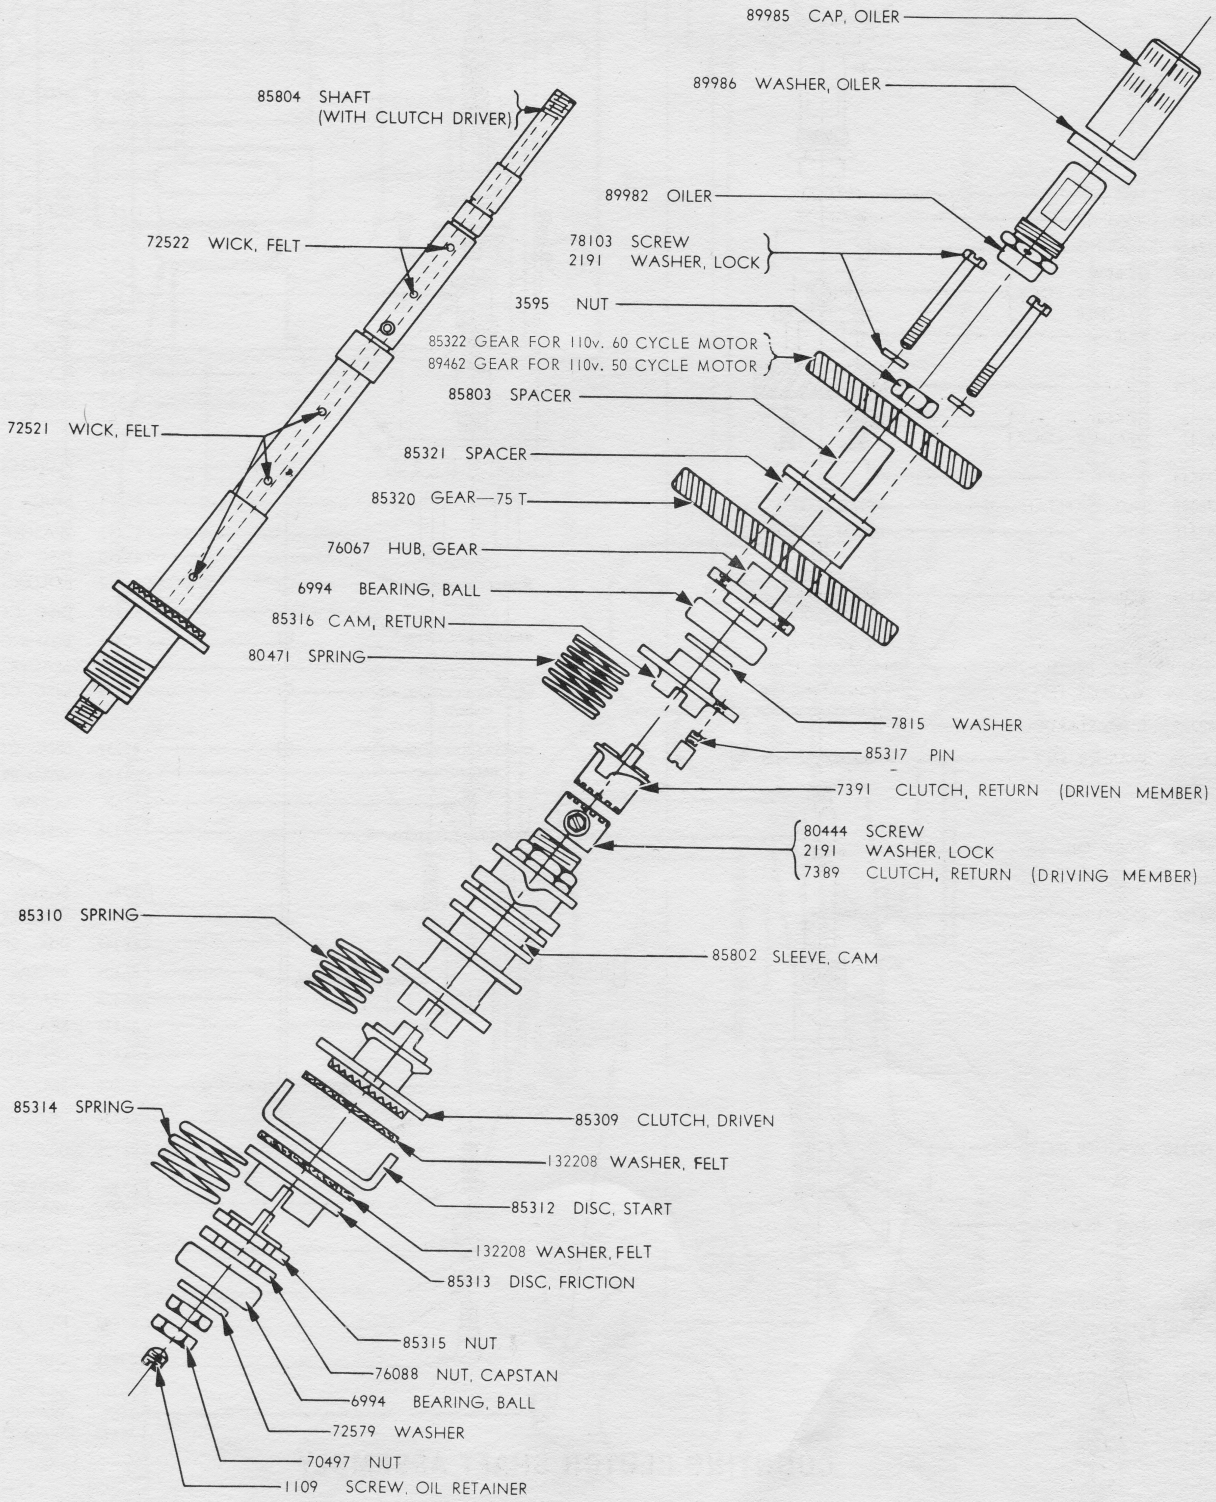


MAIN CLUTCH SHAFT ASSEMBLY

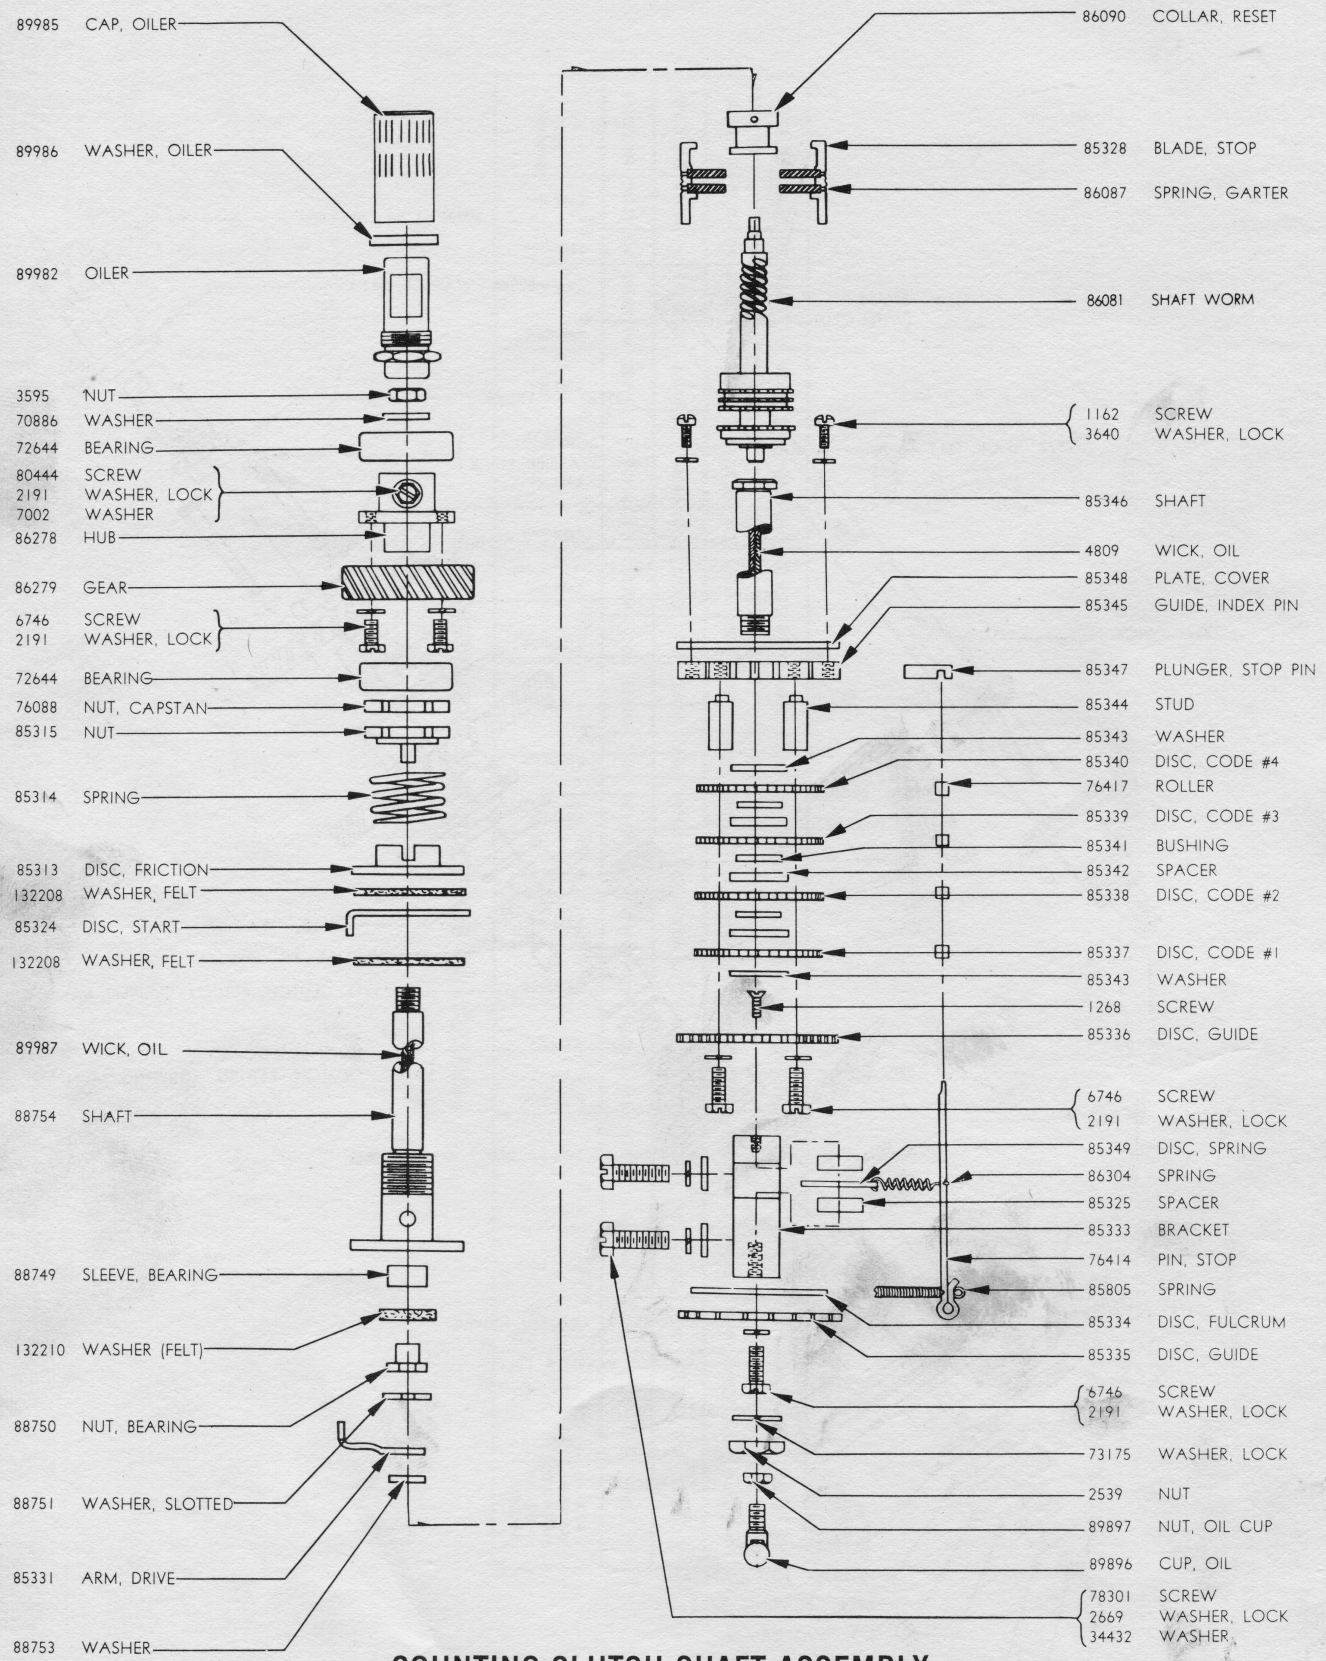


COUNTING CLUTCH SHAFT ASSEMBLY

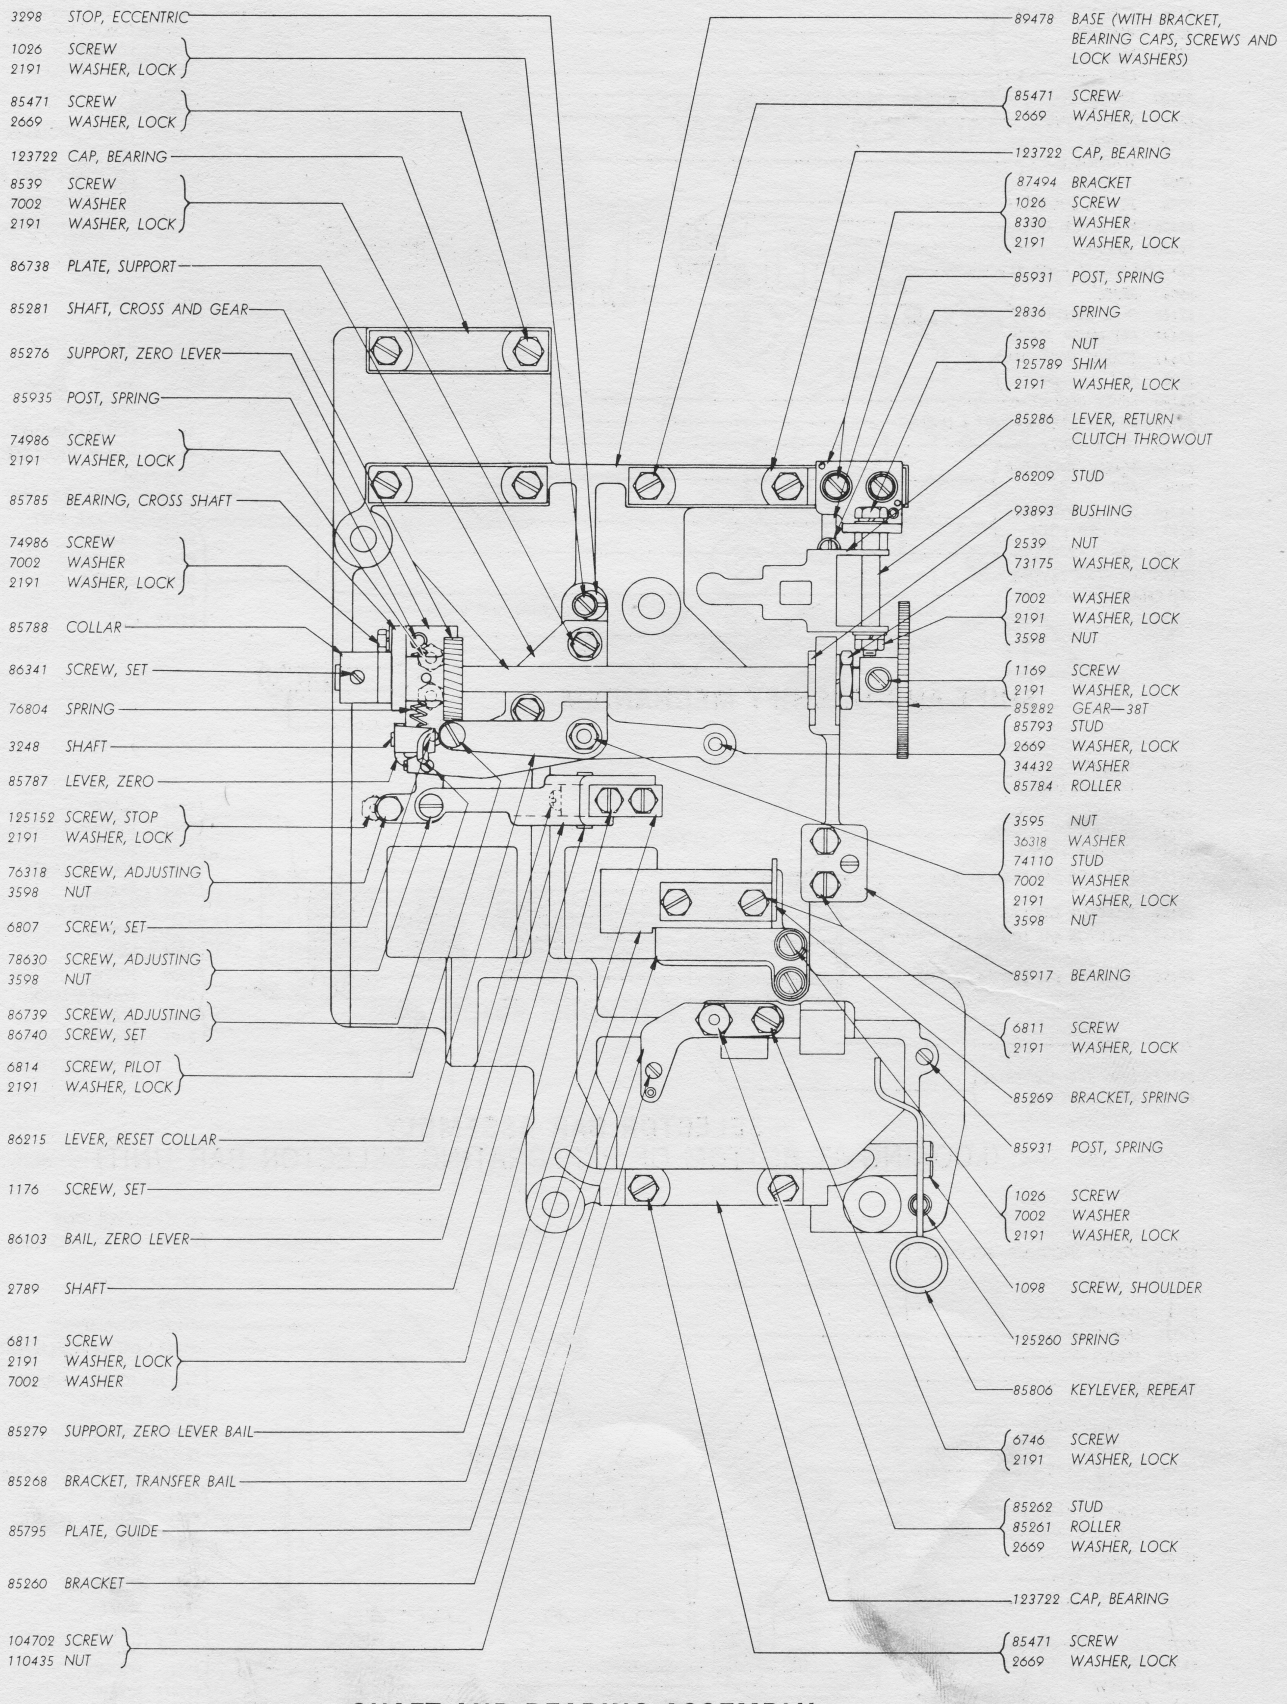


SHAFT AND BEARING ASSEMBLY

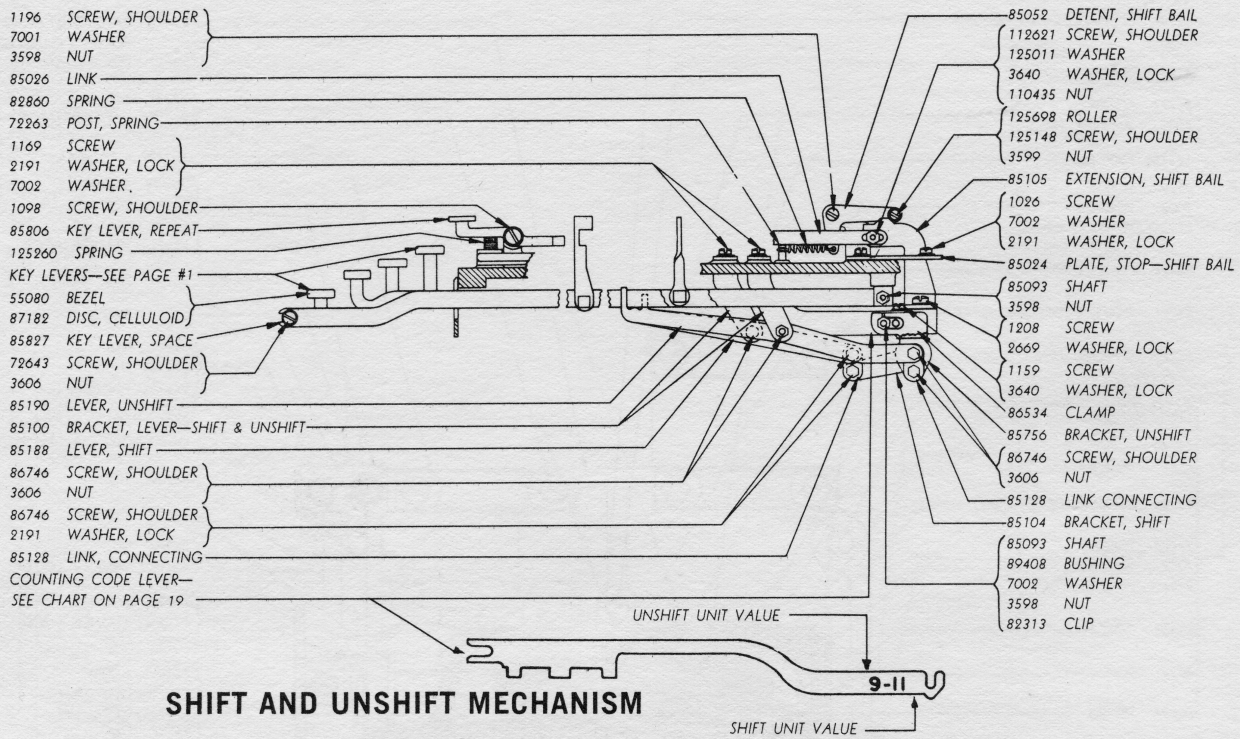


SHIFT AND UNSHIFT MECHANISM

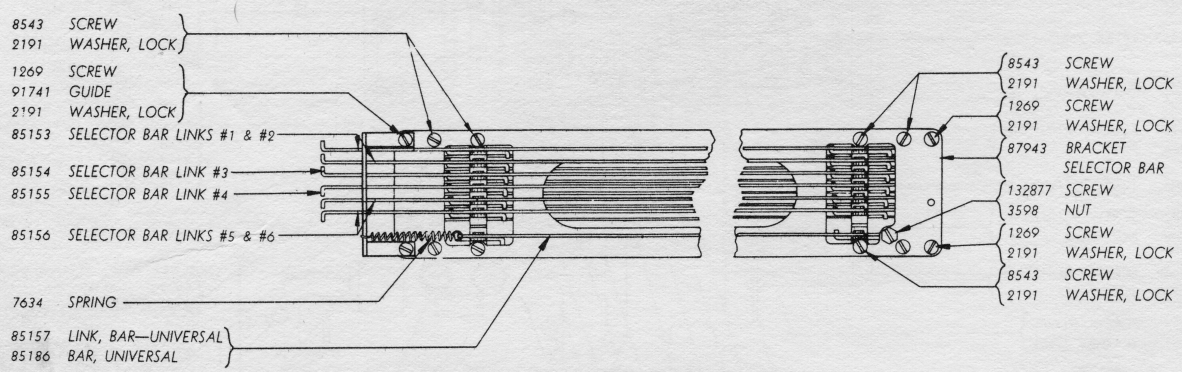


SELECTOR BAR ASSEMBLY
(LOOKING AT BOTTOM OF PERFORATING SELECTOR BAR UNIT)

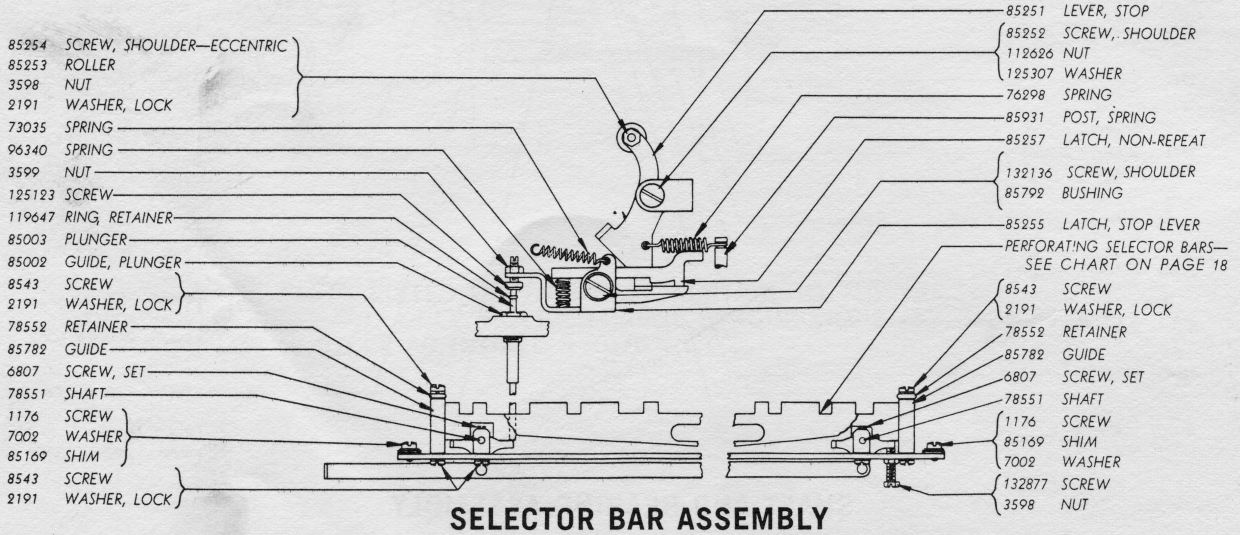


SELECTOR BAR ASSEMBLY
(LOOKING AT FRONT OF PERFORATING SELECTOR BAR UNIT)

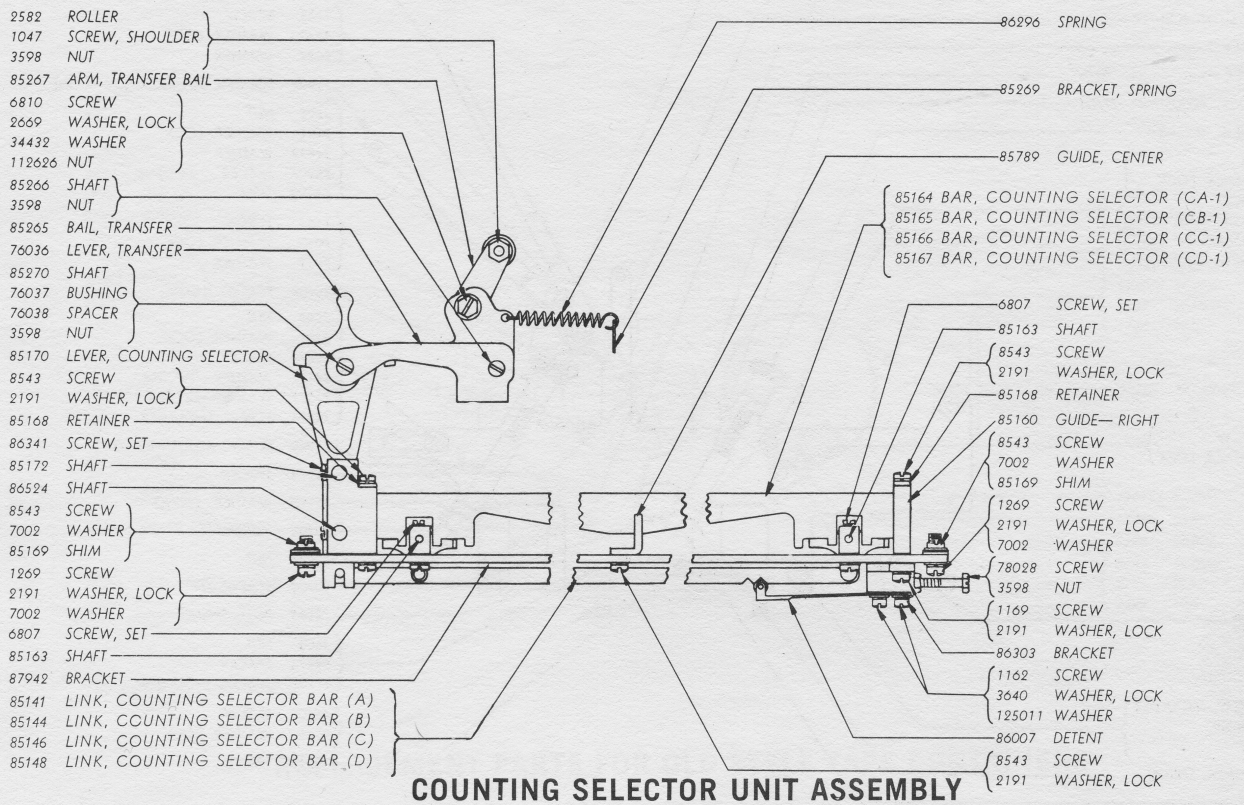


COUNTING SELECTOR UNIT ASSEMBLY
(FRONT VIEW)

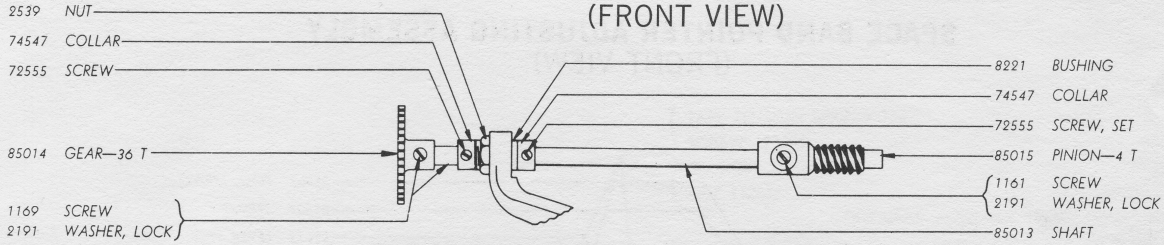


POINTER DRIVE SHAFT ASSEMBLY

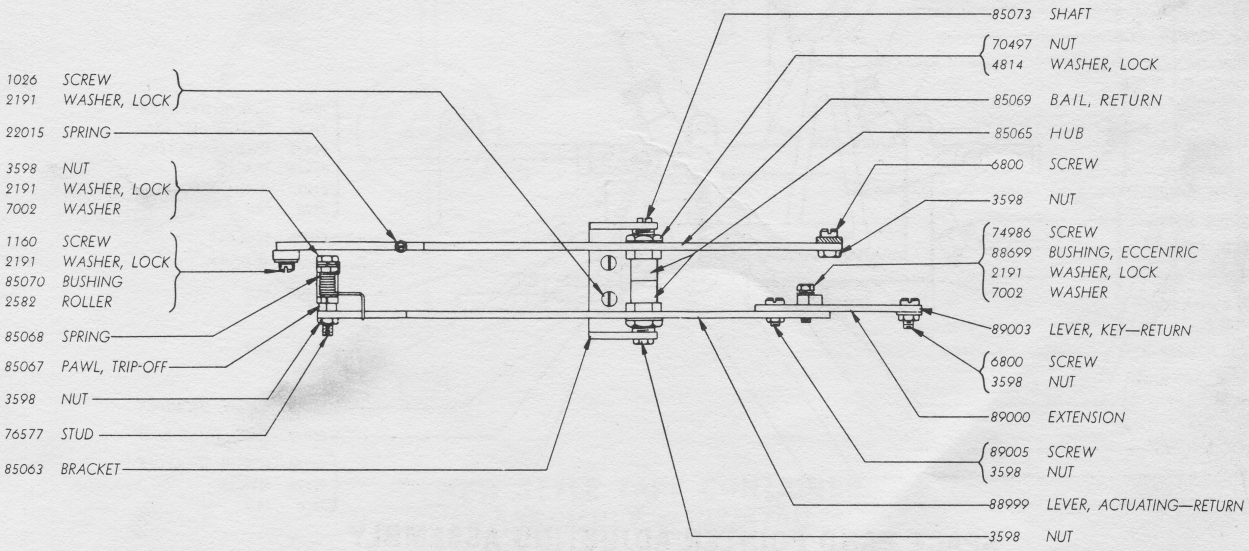


RETURN CLUTCH LEVER ASSEMBLY

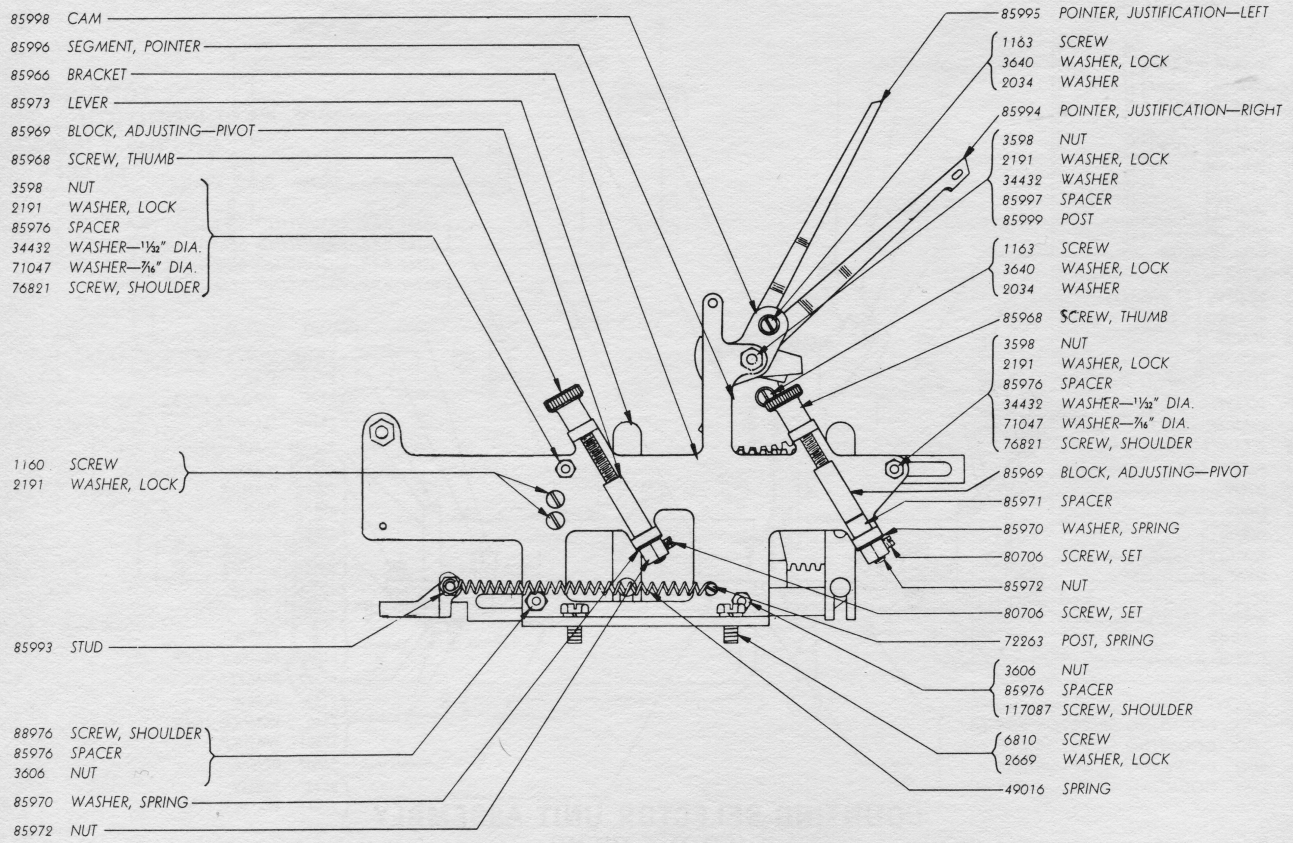


SPACE BAND POINTER ADJUSTING ASSEMBLY
(FRONT VIEW)

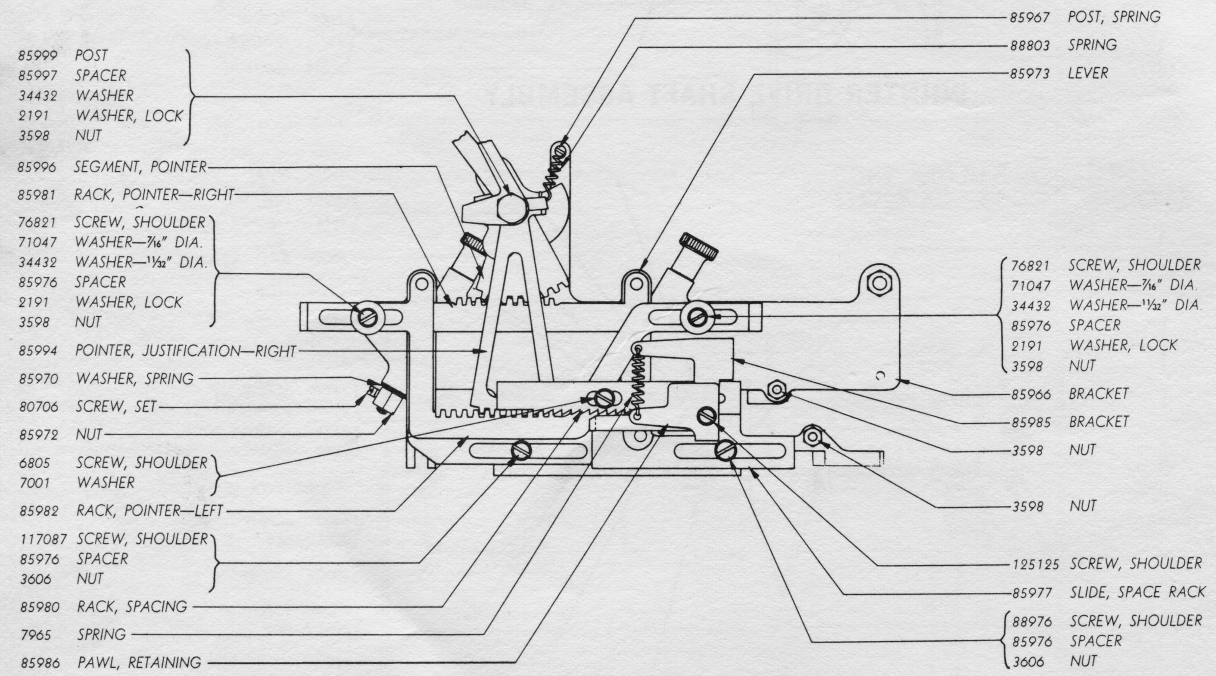


SPACE BAND POINTER ADJUSTING ASSEMBLY
(REAR VIEW)

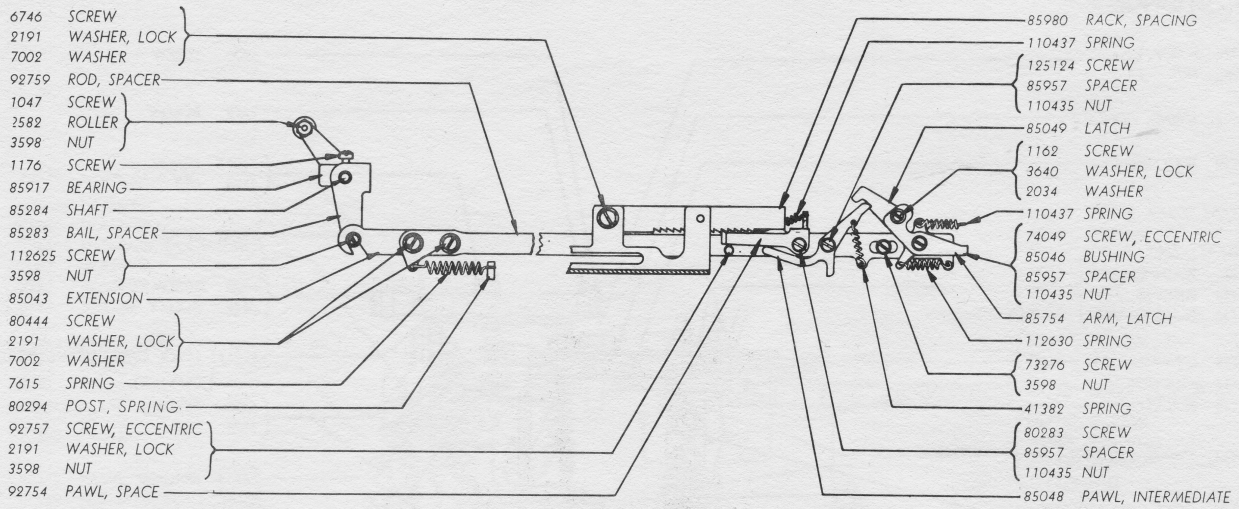

SPACE BAND CROSS BAR ASSEMBLY

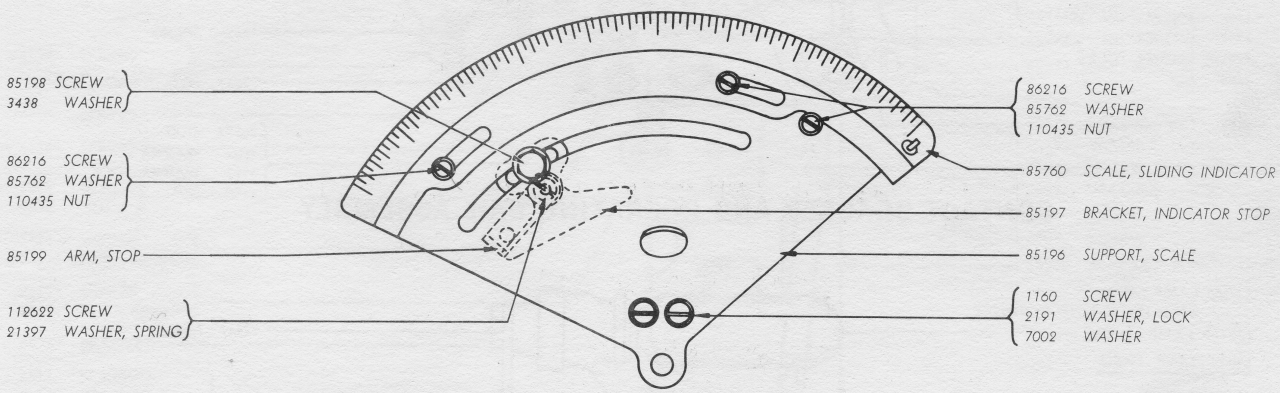


INDICATOR SCALE ASSEMBLY

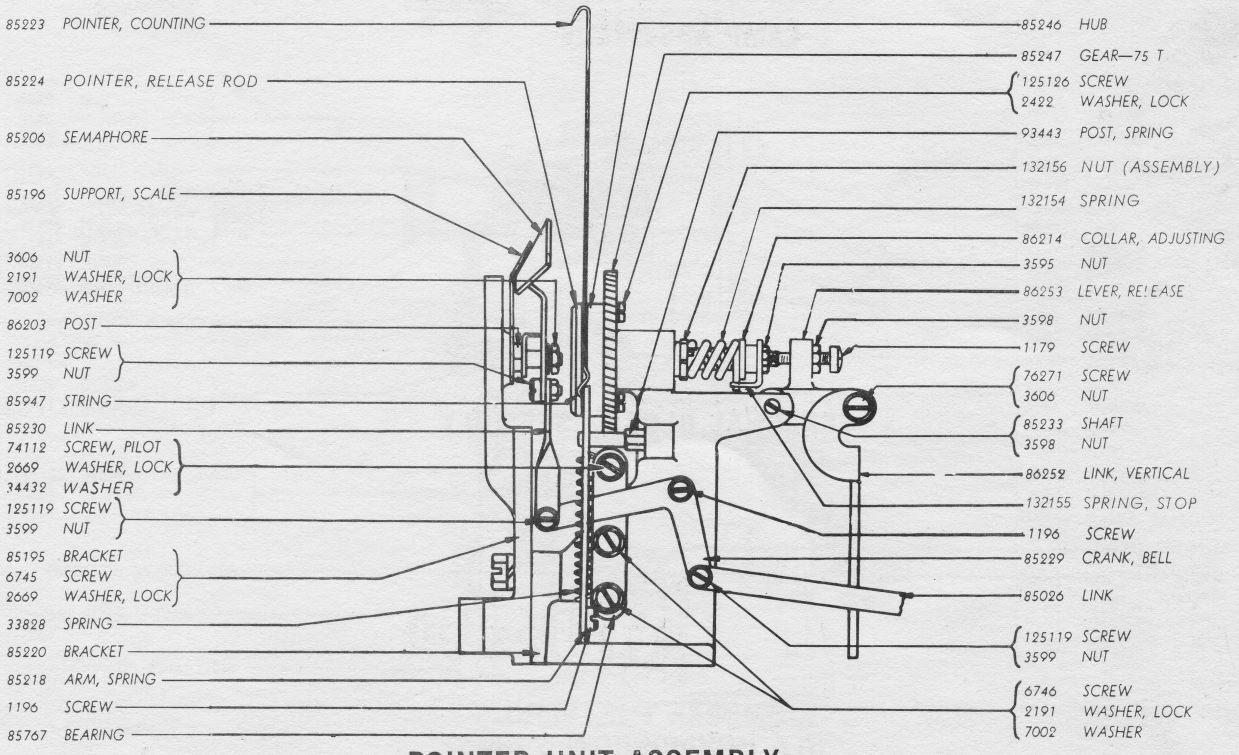


POINTER UNIT ASSEMBLY


(FOR OLD STYLE POINTER DRIVE SEE PAGE 10)

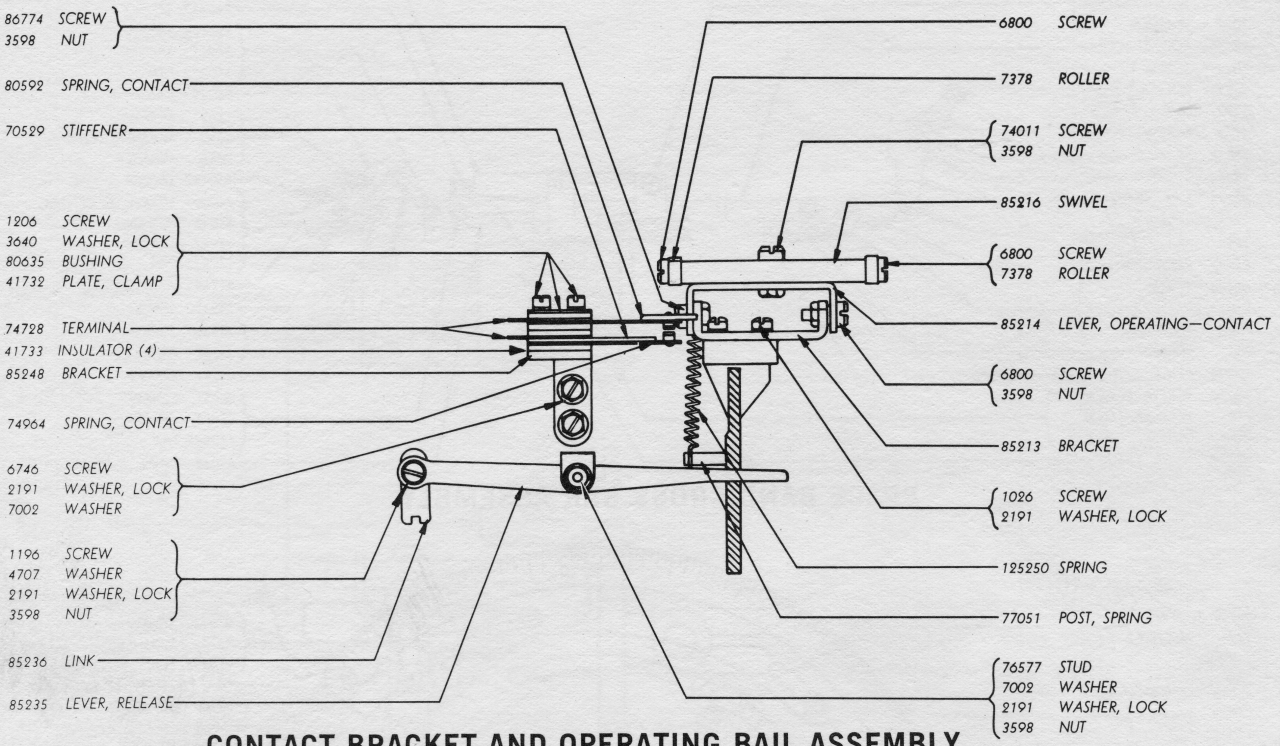


CONTACT BRACKET AND OPERATING BAIL ASSEMBLY

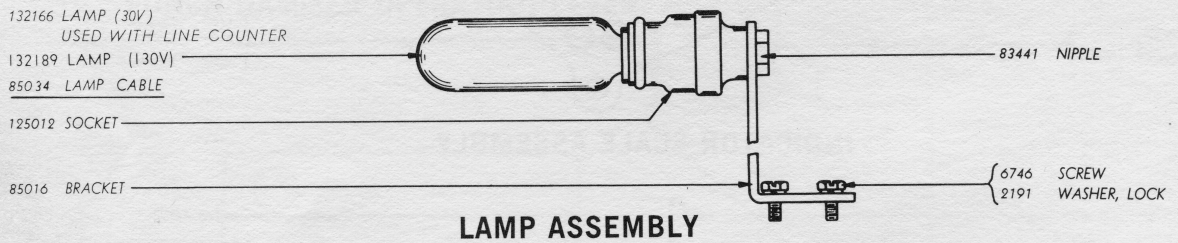


LAMP ASSEMBLY

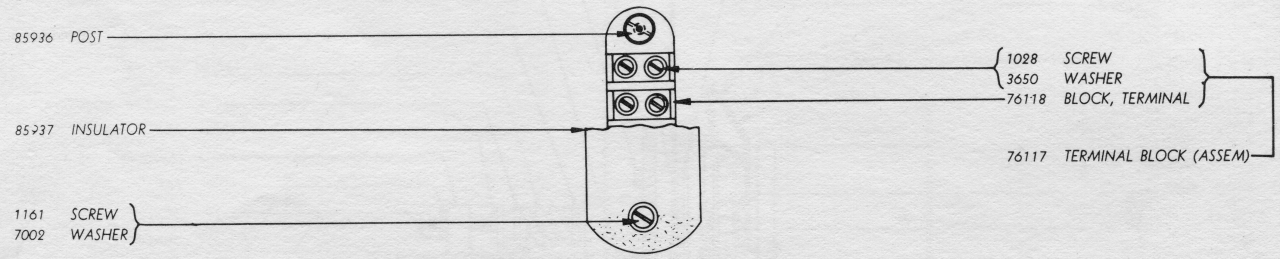


TERMINAL BLOCK ASSEMBLY

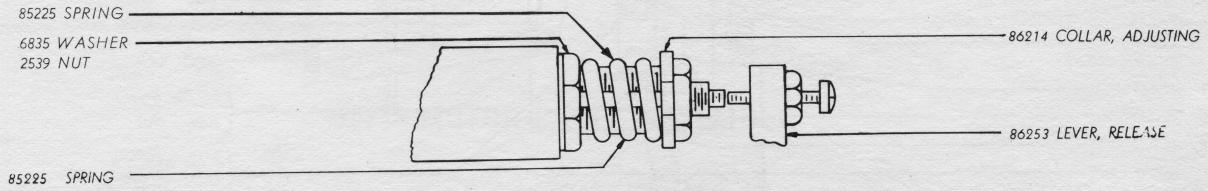


OLD STYLE POINTER DRIVE

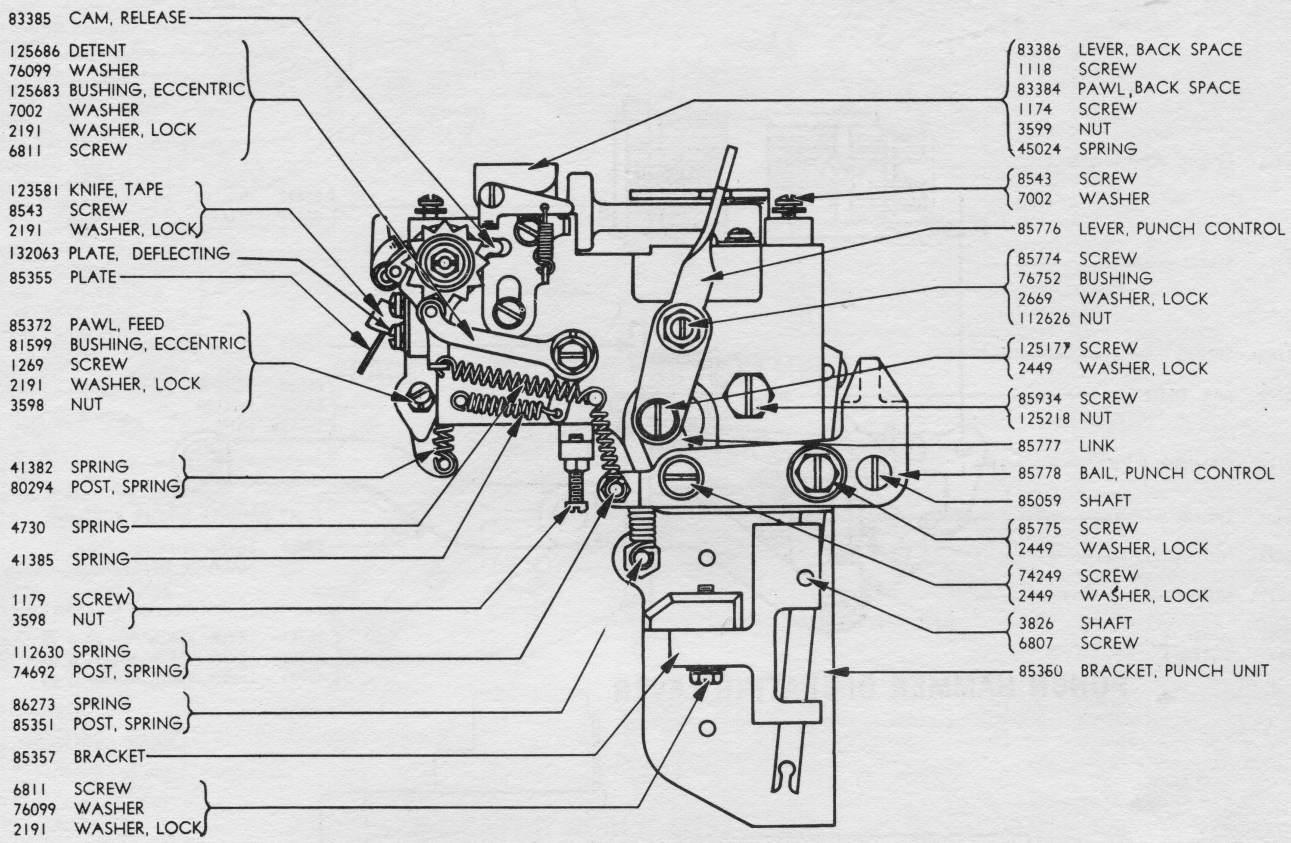


PUNCH UNIT ASSEMBLY
(FRONT VIEW)

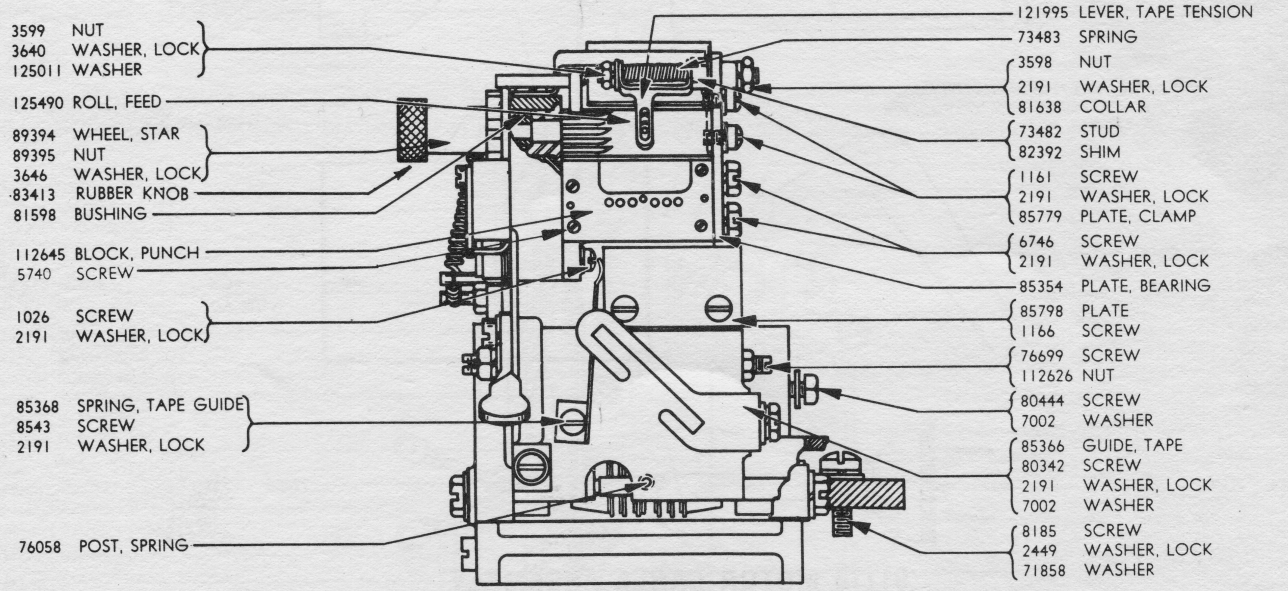



PUNCH UNIT ASSEMBLY
(TOP VIEW)

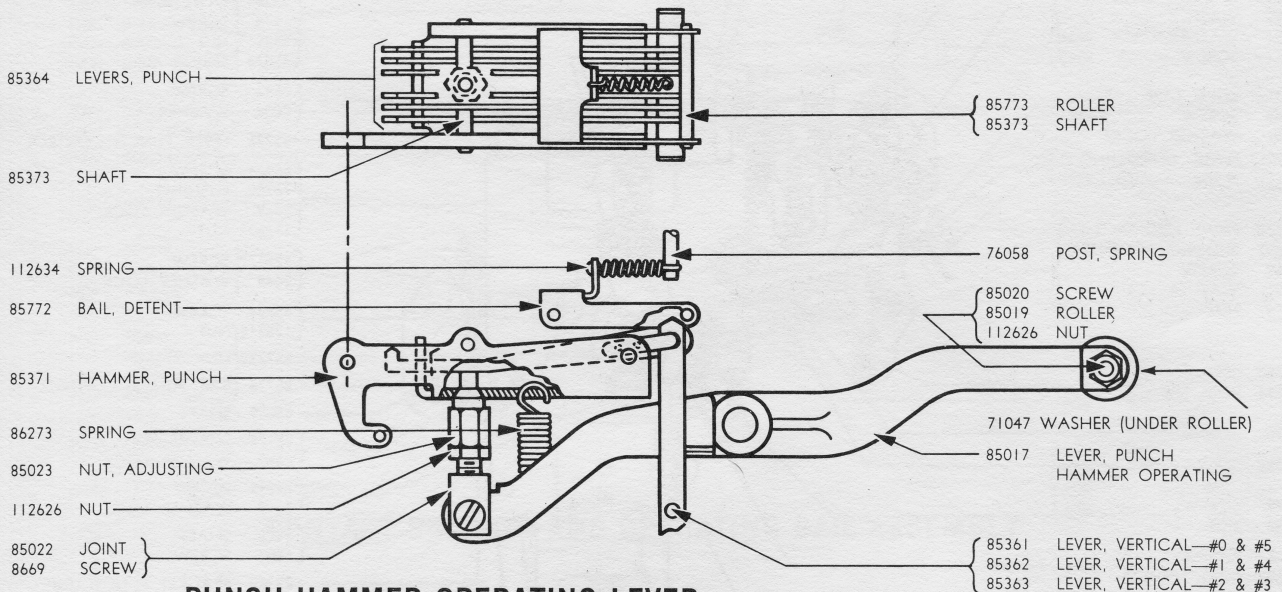


PUNCH HAMMER OPERATING LEVER

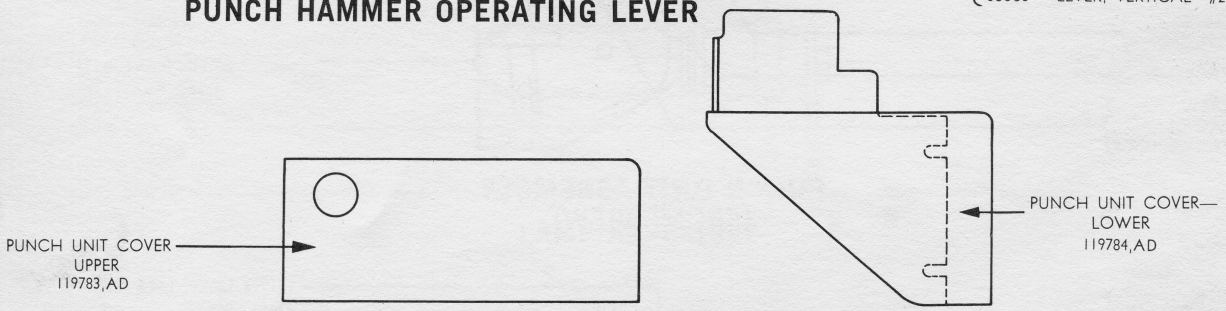

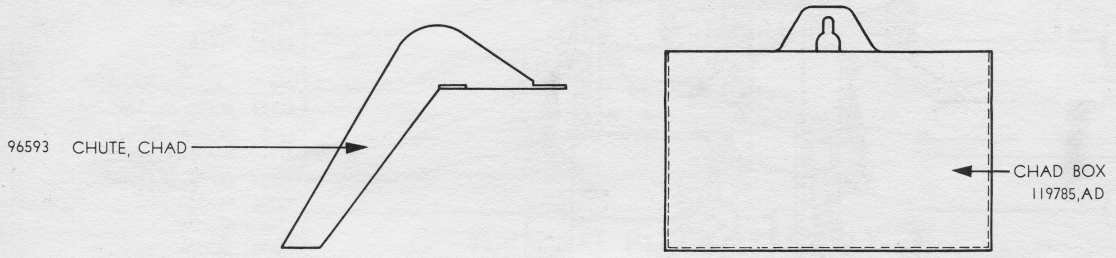

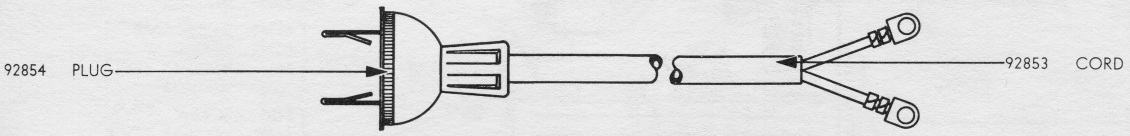


91115 MOTOR CABLE ASSEMBLY

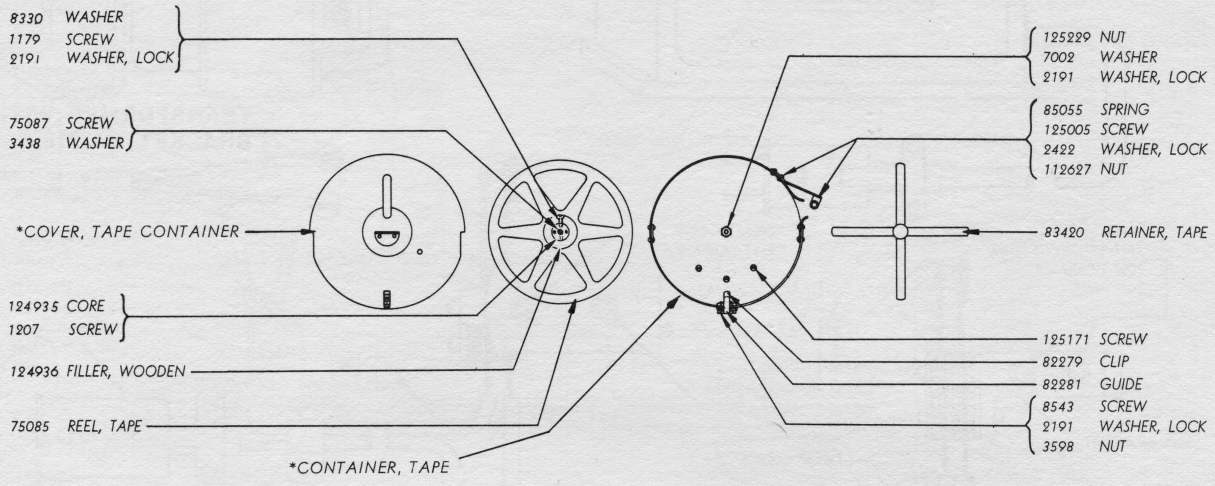

*NO LONGER FURNISHED


REPLACEMENT PARTS FOR OLD STYLE TAPE CONTAINERS

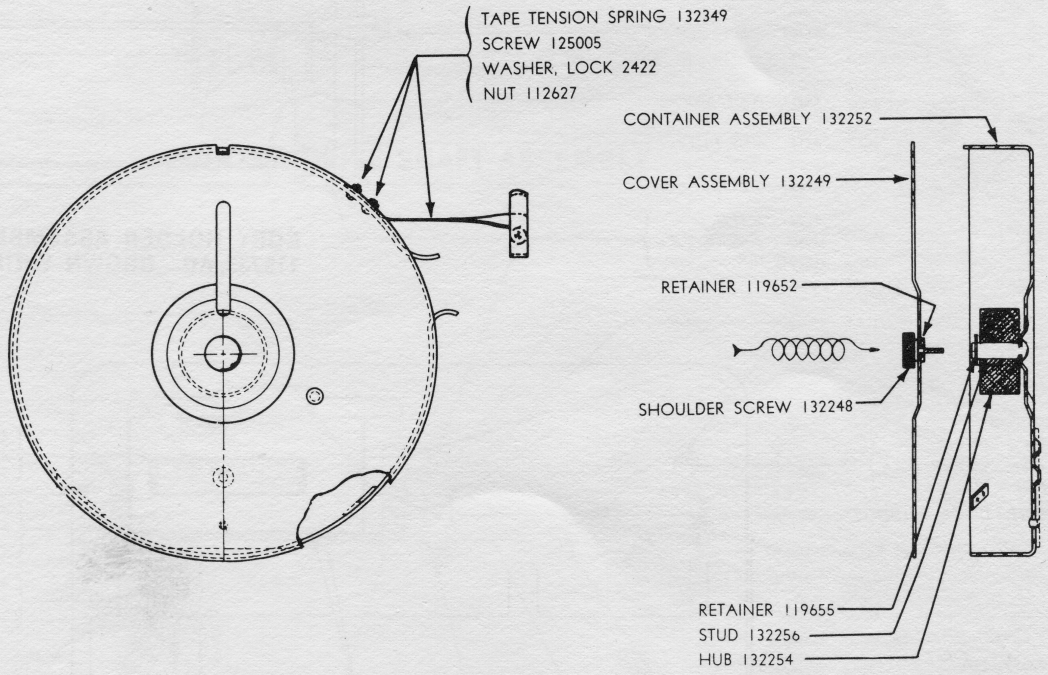


NEW STYLE TAPE CONTAINER ASSEMBLY #132247AD


VEEDER-ROOT LINE COUNTER SET OF PARTS #132173


VEEDER-ROOT LINE COUNTING ASSEMBLY w/PLUG #132164

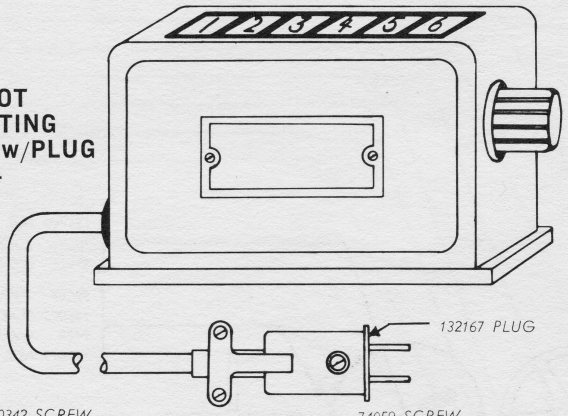

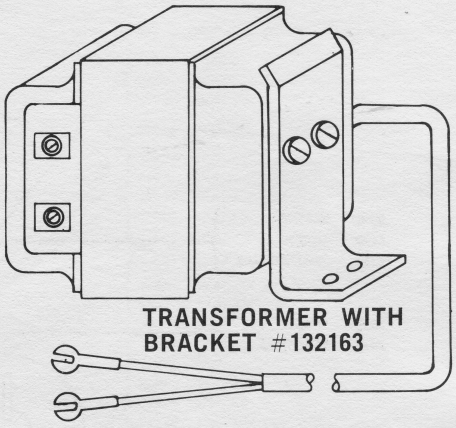


TRANSFORMER WITH BRACKET #132163

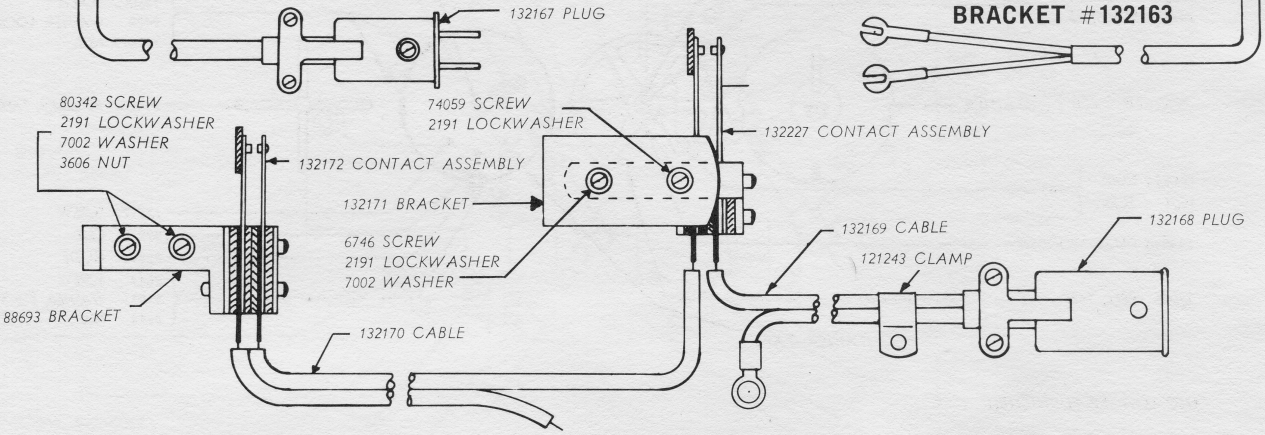


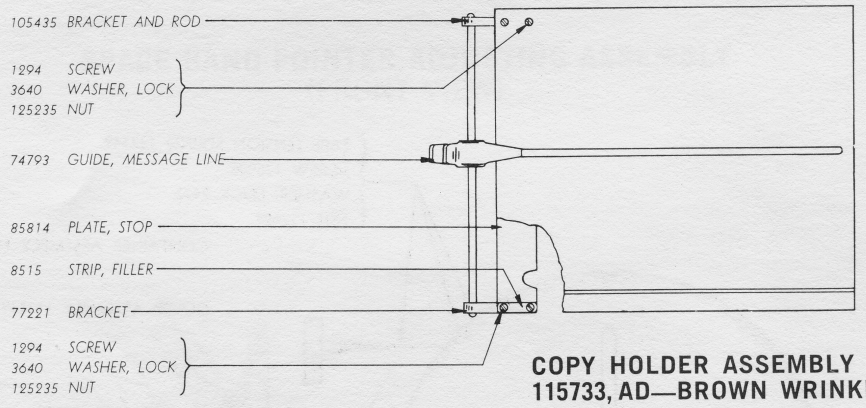


COPY HOLDER ASSEMBLY 115733, AD—BROWN WRINKLE

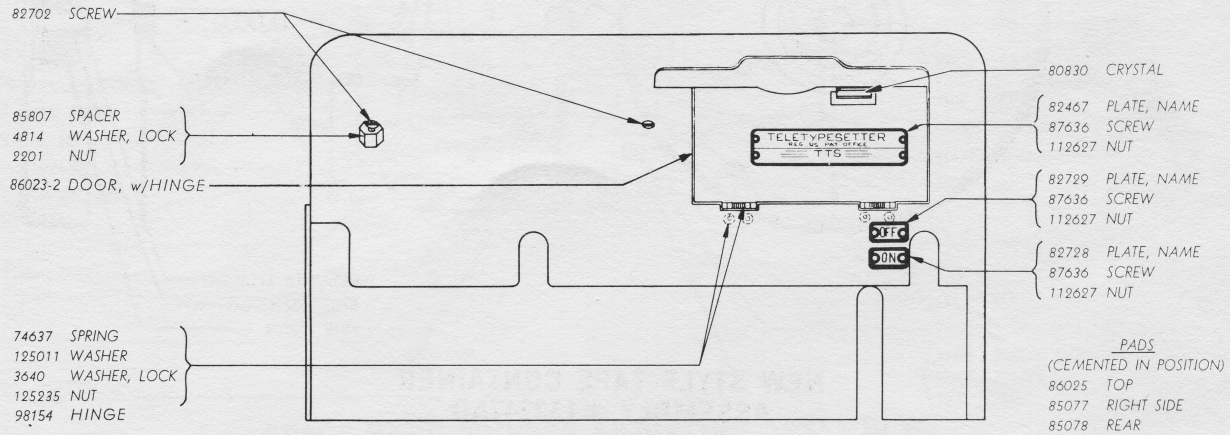

COVER ASSEMBLY TPEC200AD—BROWN WRINKLE

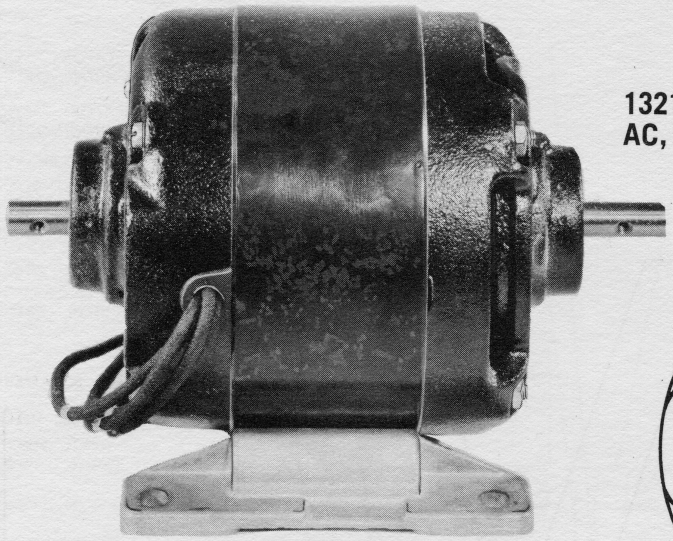


132124 INDUCTION MOTOR, 1/20 H.P. 115V-AC, 50-60 CYCLE (G.E. MODEL 5KH23AC322B)

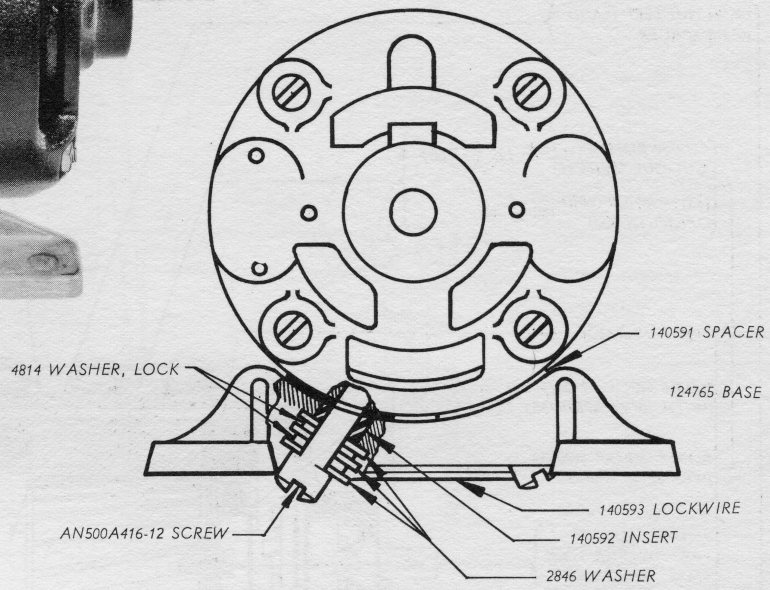


MOTOR MOUNTING

FOR MOTOR PARTS AND REPAIR CONTACT GENERAL ELECTRIC AUTHORIZED SMALL MOTOR SERVICE STATIONS AS LISTED IN THE CLASSIFIED TELEPHONE DIRECTORY.


MOTOR MOUNTING SCREWS

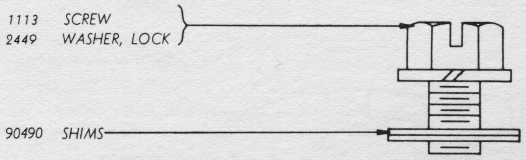



PERTAINS TO THE GENERAL ELECTRIC MOTOR MODEL NR. 5KH 23AC322B

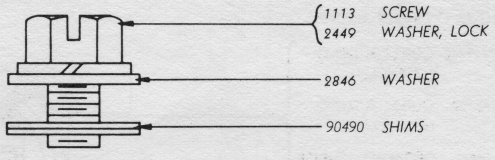

PERTAINS TO THE HOLTZER-CABOT MOTOR MODEL NR. S-9017

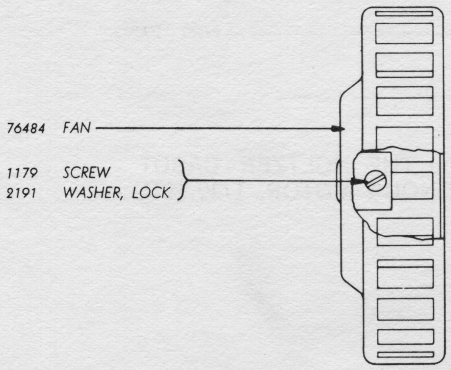




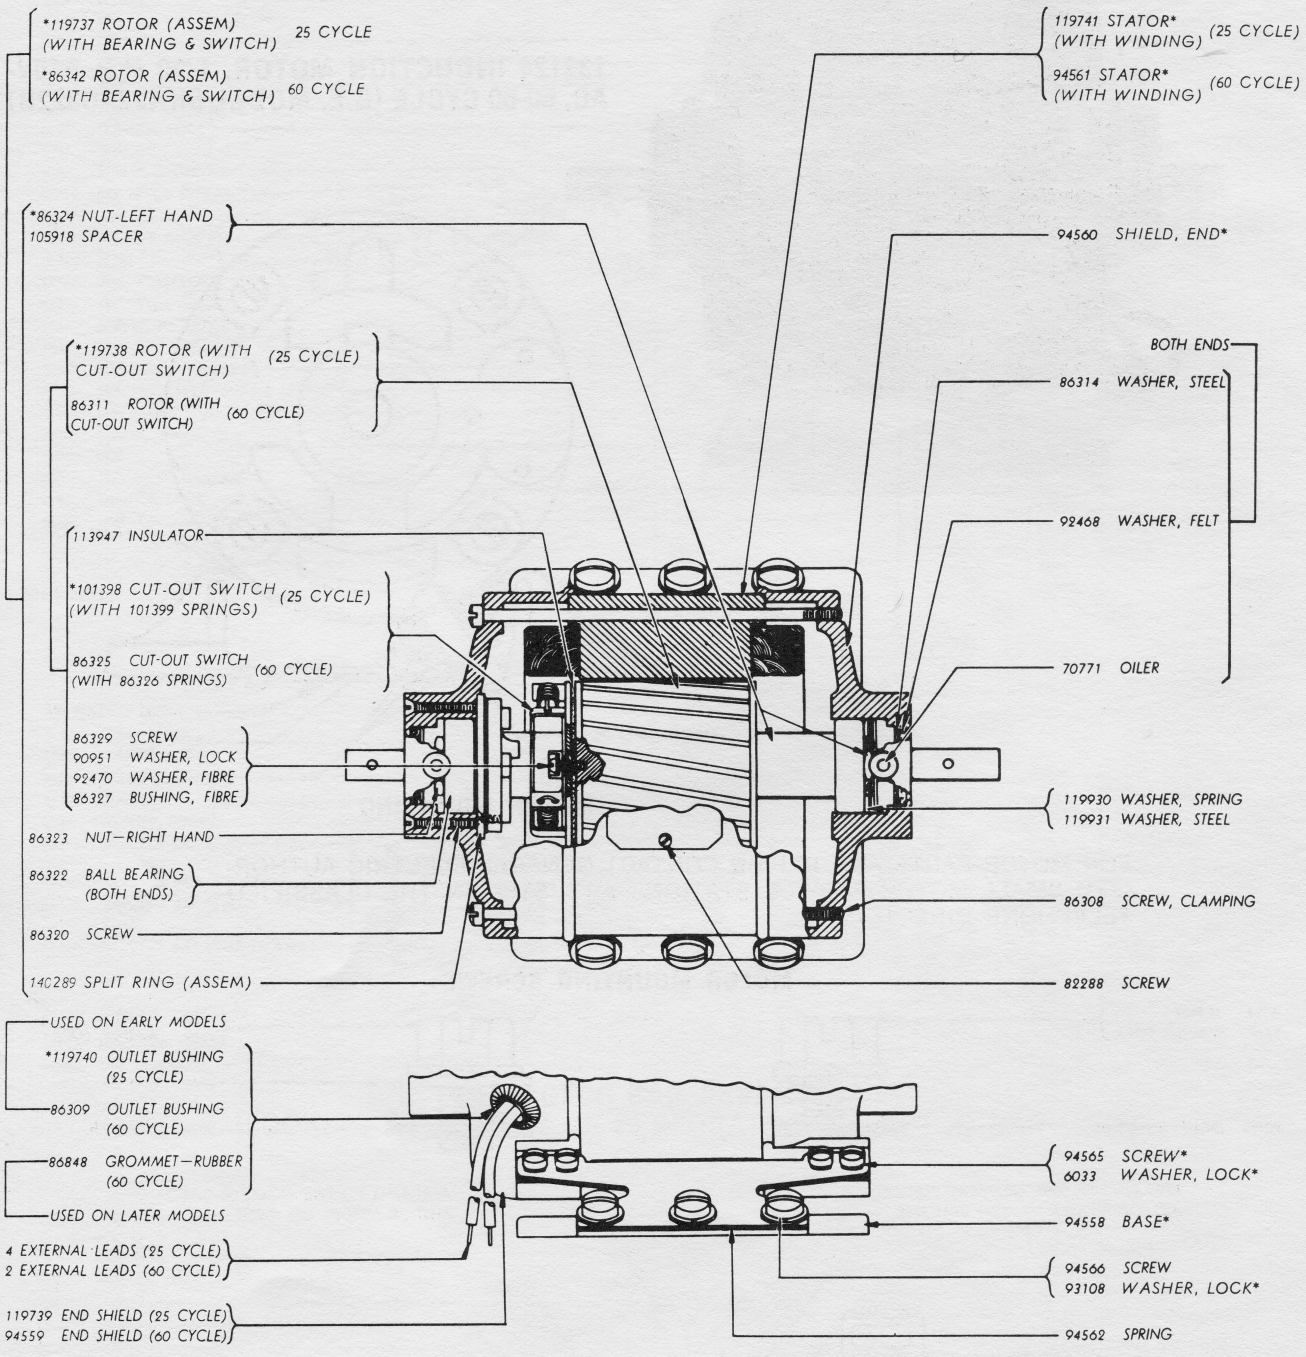

*NO LONGER FURNISHED

THE PARTS LISTED ON THIS PAGE PERTAIN TO THE HOLTZER-CABOT MODEL S-9017 ONLY. HOLTZER-CABOT SYNCHRONOUS MOTOR, 1/40 H.P. 115V 60 CYCLE AC (MODEL S-9017)

ELECTRICAL CLUTCH MECHANISM ASSEMBLY 132887

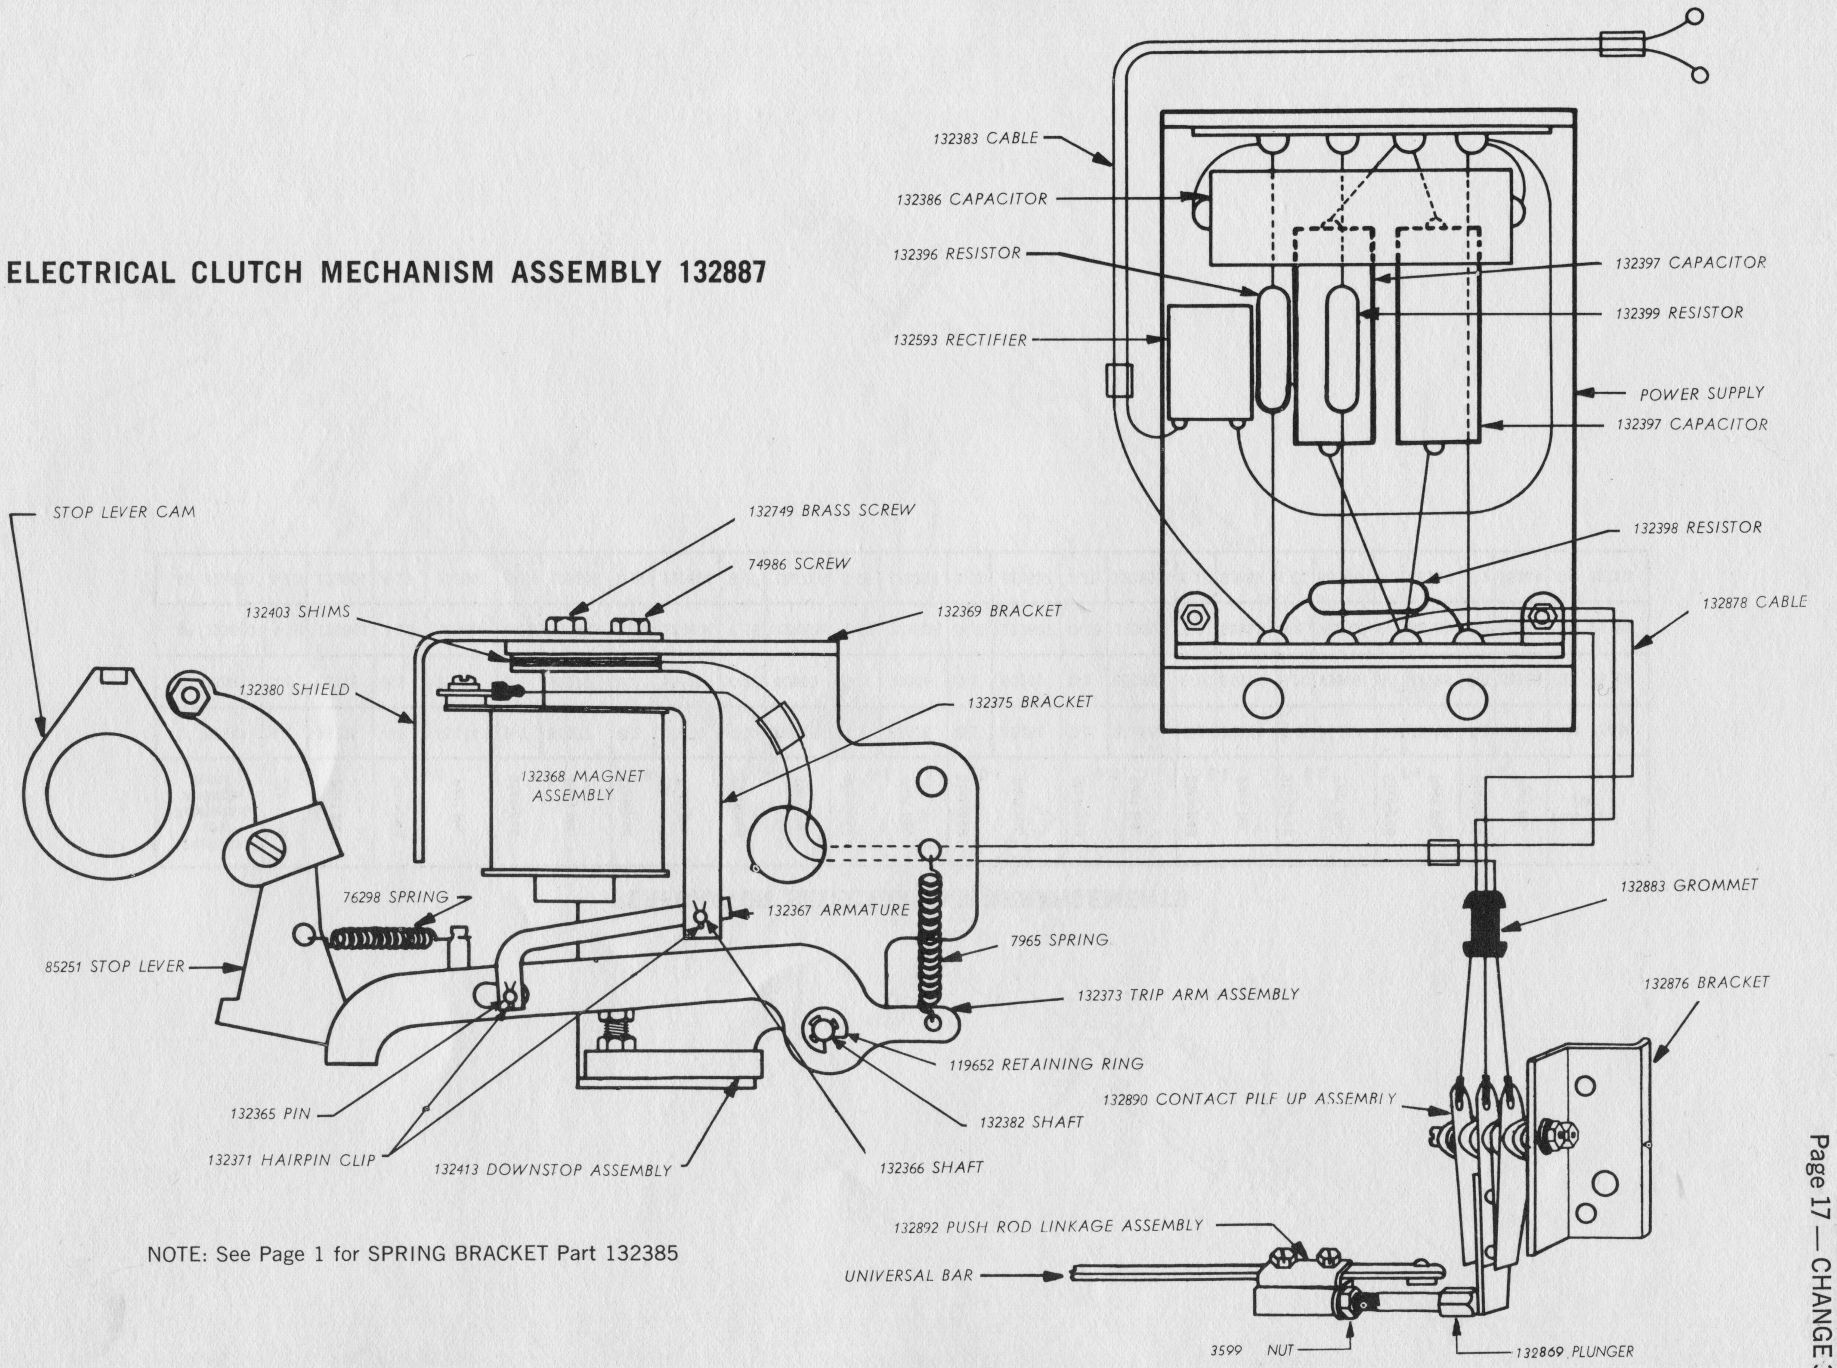

NOTE: See Page 1 for SPRING BRACKET Part 132385

PERFORATOR SELECTOR BAR ARRANGEMENTS

Position Set Numbers & Arrangement	A-1 Stamped	A-1 Part No.	A-2 Stamped	A-2 Part No.	B-1 Stamped	B-1 Part No.	B-2 Stamped	B-2 Part No.	C-1 Stamped	C-1 Part No.	C-2 Stamped	C-2 Part No.	D-1 Stamped	D-1 Part No.	D-2 Stamped	D-2 Part No.	E-1 Stamped	E-1 Part No.	E-2 Stamped	E-2 Part No.	F-1 Stamped	F-1 Part No.	F-2 Stamped	F-2 Part No.	Universal Bar
C 91643	A-1	85175	A-2	85174	B-1	85177	B-2	85176	C-1	85179	C-2	85178	D-1	85181	D-2	85180	E-1	85183	E-2	85182	F-1	85185	F-2	85184	UB 85186
R 93069	A-1	85175	A-2	85174	B-1	85177	B-2	85176	C-1C	93063	C-2C	93064	D-1	85181	D-2	85180	E-1C	93065	E-2C	93066	F-1	85185	F-2	85184	UB 85186
AP 123600	A-1D	123601	A-2D	123602	B-1D	123603	B-2D	123604	C-1E	123605	C-2E	123606	D-1D	123607	D-2D	123608	E-1	85183	E-2	85182	F-1	85185	F-2	85184	UB 85186
AS 123961	A-1D	123601	A-2D	123602	B-1D	123603	B-2D	123604	C-1F	123726	C-2F	123727	D-1D	123607	D-2D	123608	E-1C	93065	E-2C	93066	F-1	85185	F-2	85184	UB 85186


COUNTING CODE LEVERS FOR TELETYPESETTER PERFORATORS WITH 5 TO 18 UNIT COUNTING RANGE

Unit Value Selected and Counted in Shift Position


Un-shift	5	6	7	8	9	10	11	12	13	14	15	16	17	18
5	86219	86028	86220	86221	86029	86222	96587	86030	132476	86072	132477	132478	132479	86091
6	132480	85106	86237	85119	86223	86224	86225	86242	85121	132481	122824	132482	132483	85115
7	132484	86290	86226	86292	86240	86227	85118	86235	85120	85125	122825	132485	132486	95013
8	132487	132488	132489	86094	86291	86228	86229	86230	86239	86244	86245	132490	132491	86295
9	86101	86092	86234	86233	85107	86293	85113	85111	85126	85117	85124	86243	132492	85109
10	89431	132493	89432	132494	91682	86100	96588	86247	85123	85122	85116	86246	132495	89433
11	132496	95268	132497	132498	95270	95123	89900	86294	86236	85110	85114	86097	122826	132204
12	132205	132499	132500	132501	95271	132502	123311	123312	123313	86231	86095	89434	96586	122828
13	132503	132504	132505	132506	132203	132507	132199	132194	132192	132536	132537	89435	86098	86102
14	132191	132538	132539	132540	96585	132541	132542	132195	132543	132193	86099	132544	89436	86238
15	132198	132545	132546	132547	132548	132190	132200	132197	132549	132550	132196	132551	132552	85112
16	132553	132554	132555	132556	132557	132558	132206	132559	132560	132561	132562	86093	86241	122827
17	132563	132564	132565	132566	132567	132568	132569	132570	132571	132572	132573	132574	132575	86096
18	132576	95272	132577	132578	95269	86071	132579	86232	132580	132581	132582	132583	132584	85108

85127 Function Code Lever


NOTE: Each lever controls two counting selections, one in its unshifted position and a second in its shifted position. For example, part No. 85113, listed at the intersection of the horizontal 9 unit column with the vertical 11 unit column, selects 9 units in unshift position and 11 units in shift position. This part is stamped "9-11".

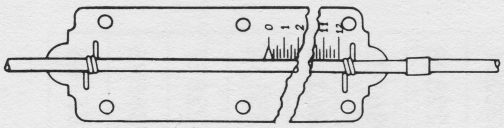


4841 SCALE, 12 LB.
82711 SCALE, 64 OZ.




110443 SCALE, 8 OZ.




75503 HOOK-PUSH SPRING




110444 SCALE, 32 OZ.




75765 HOOK-PULL SPRING




110447 DRIVER, SCREW




125763 3/16"–1/4" WRENCH, OPEN




125776 5/16" WRENCH, OPEN




2802 3/8"–9/16" WRENCH, OPEN

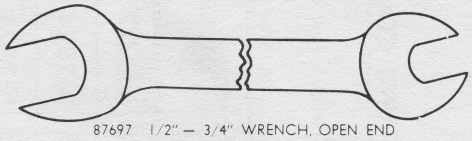


87697 1/2" – 3/4" WRENCH, OPEN END




125775 3/8"–7/16" WRENCH, OPEN




4838 3/8"–7/16" WRENCH, OPEN

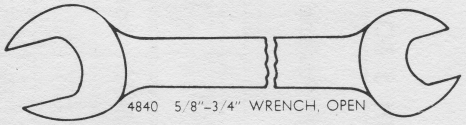


4840 5/8"–3/4" WRENCH, OPEN

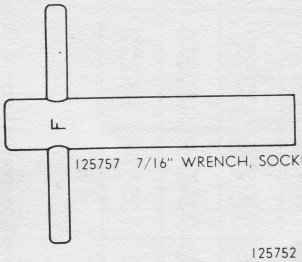

125757 7/16" WRENCH, SOCKET




125783 STONE, CARBORUNDUM




2215 GAUGE, TAPE




125752 3/16" WRENCH, SCREW DRIVER SOCKET




86340 WRENCH, CAPSTAN

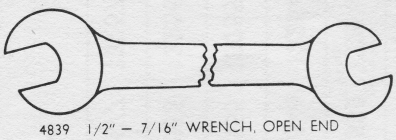


4839 1/2" – 7/16" WRENCH, OPEN END



89955 5/16" WRENCH, SOCKET



89954 1/4" WRENCH, SOCKET

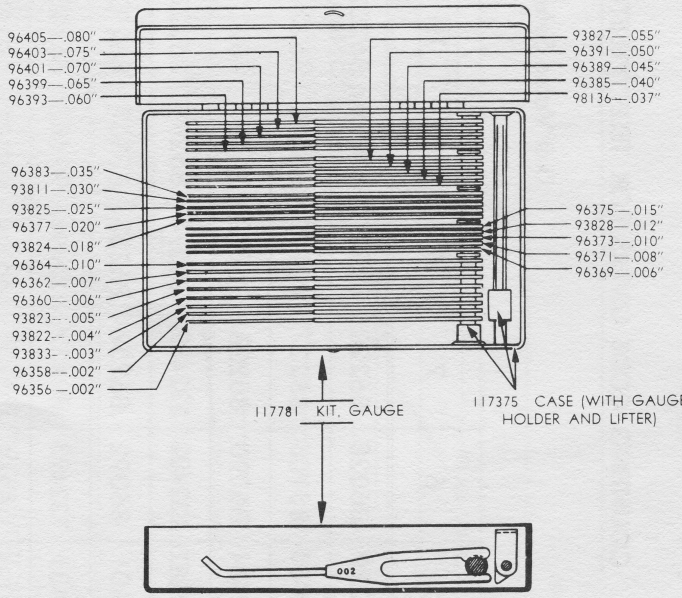

117781 KIT, GAUGE

117375 CASE (WITH GAUGE HOLDER AND LIFTER)

TOOLS

NUMERICAL INDEX

Part Number	Part	Page
1026	Screw (6-40 Shoulder)	1, 5, 6, 7 10, 11, 15
1028	Screw (6-40 Brass)	10
1047	Screw (6-40 Shoulder)	7, 9
1098	Screw (6-40 Shoulder)	5, 6
1109	Screw (10-32 x 7/32 Set)	3
1113	Screw (1/4 20 x 7/8)	15
1118	Screw (6-40 Shoulder)	11
1121	Screw (1-32 x 3/8)	1
1159	Screw (4-40 x 3/8)	6
1160	Screw (6-40 x 1/4)	7, 8, 9
1161	Screw (6-40 x 1/4)	7, 10, 11
1162	Screw (4-40 x 1/4)	4, 7, 9
1163	Screw (4-40 x 3/16)	8
1166	Screw (4-36 x 1/4)	11
1169	Screw (6-40 x 7/16)	1, 5, 6,7
1174	Screw (4-40 Shoulder)	11
1176	Screw (6-40 x 3/16)	5, 6, 9
1179	Screw (6-40 x 5/8)	9, 11, 13, 15
1196	Screw (6-40 Shoulder)	6, 8, 9, 10
1206	Screw (4-40 x 5/16)	10
1207	Screw (4-36 x 5/16)	13
1208	Screw (10-32 x 5/16)	1, 2, 6
1223	Screw (10-32 x 1/2)	1, 2
1268	Screw (6-40 x 5/16)	4
1269	Screw (6-40 x 1/2)	1, 2, 6, 7, 11
1294	Screw (4-36 x 1/2)	14
2034	Washer	8, 9
2191	Washer, Lock	1 to 11, 13, 15
2201	Nut (5/16-32 Hex.)	14
2215	Gauge, Tape	20
2263	Nut (8-32 Hex.)	8
2322	Washer, Lock	1
2422	Washer, Lock	9, 13
2449	Washer, Lock	11, 15
2539	Nut (3/8-32 Hex.)	2, 4, 5, 7, 10
2566	Spring (1 Used)	2
2582	Roller	7, 9
2669	Washer, Lock	1 to 9, 11
2789	Shaft	5
2802	3/8"-7/16" Wrench, Open	20
2836	Spring	5
2846	Washer	15
3248	Shaft	5
3298	Stop, Eccentric	5
3438	Washer	9, 13
3595	Nut (1/4-32 Hex.)	3, 4, 5, 9
3598	Nut (6-40 Hex.)	1 to 10, 11, 13
3599	Nut (4-40 Hex.)	6, 9, 11, 17
3606	Nut (6-40 Hex.)	1, 6, 8, 9, 14
3640	Washer, Lock	4, 10, 11, 14
3646	Washer, Lock	11
3650	Washer, Brass	10
3826	Shaft	11
3843	Spring	2
4707	Washer	10
4730	Spring	11
4809	Wick, Oil	4
4814	Washer, Lock	7, 14, 15
4838	3/8"-7/16" Wrench, Open	20
4839	1/2"-7/16" Wrench, Open	20
4840	5/8"-3/4" Wrench, Open	20
4841	Scale, 12 lb.	20
5740	Screw	11
6033	Washer, Lock	16
6745	Screw (10-32 x 1/2)	9
6746	Screw (6-40 x 5/16)	1, 4, 5, 9 10, 11, 14
6800	Screw (6-40 Shoulder)	7, 10
6805	Screw (6-40 Shoulder)	8
6807	Screw (6-40 x 3/16)	5, 6, 7, 11
6810	Screw (10-32 x 3/8)	7, 8
6811	Screw (6-40 x 5/8)	2, 5, 11
6814	Screw (6-40 Pilot)	5
6835	Washer	10
6994	Bearing, Ball	3
7001	Washer	6, 8
7002	Washer	1 to 10, 11, 13
7087	Screw (6-40 Shoulder)	8
7334	Post	1
7378	Roller	10
7389	Clutch, Return (Driving Member)	3
7391	Clutch, Return (Driving Member)	3
7615	Spring	9
7634	Spring	6
7815	Washer	3
7965	Spring	8, 17
8185	Screw (1/4-20 x 3/4)	11
8221	Bushing	7
8330	Washer	5, 13
8515	Strip, Filler	14
8539	Screw (6-40 x 1/2)	5
8543	Screw (6-40 x 1/4)	1, 6, 7, 11, 13
8669	Screw (6-40 Shoulder)	12
21397	Spring	9
22015	Spring	7
33828	Spring	9
34432	Washer	4, 5, 7, 8, 9
35826	Washer	1, 2
36318	Washer	5
41382	Spring	9, 11
41385	Spring	11
41732	Plate, Clamp	10
41733	Insulator	10
45024	Spring	11
49016	Spring	8
55080	Bezel	6
70497	Nut (5/16-32)	3, 7
70529	Stiffener	10
70771	Oiler	16
70886	Washer	4
71047	Washer	8, 12
71858	Washer	11
72263	Post, Spring	1, 6, 8
72521	Wick, Felt	3
72522	Wick, Felt	3
72555	Screw (6-40 x 3/64)	7
72579	Washer	3
72643	Screw (6-40 Shoulder)	1, 6
72644	Bearing	4
73035	Spring	6
73175	Washer, Lock	4, 5
73180	Switch, Toggle (Assy.)	1
73276	Screw (6-40 Shoulder)	9
73482	Stud	11
73483	Spring	11
74011	Screw (6-40 Shoulder)	10
74049	Screw (4-40 Shoulder)	9
74059	Screw #6-40	14
74110	Stud	5
74112	Screw (10-32 Pilot)	9
74249	Screw (1/4-32 Pilot)	11
74547	Collar	7
74637	Spring	14
74692	Post, Spring	11
74728	Terminal	10
74738	Screw (10-32 Shoulder)	1, 2
74793	Guide, Message Line	14
74964	Spring, Contact	10
74986	Screw (6-40 x 13/32)	5, 7
75085	Reel, Tape	13
75087	Screw (6-32 Shoulder)	13
75503	Hook-Push Spring	20
75765	Hook-Pull Spring	20
76036	Lever, "T" Transfer	7
76037	Bushing	7
76038	Spacer	7
76058	Post, Spring	11, 12
76067	Hub, Gear	3
76088	Nut (5/16-32 Capstan)	3, 4
76099	Washer	11
76117	Block, Terminal (Assy.)	10
76118	Block, Terminal	10
76271	Screw (6-40 Shoulder)	9
76298	Spring	6, 17
76318	Screw (6-40 x 3/8)	5
76414	Pin, Stop	4
76417	Roller	4
76484	Fan	15
76577	Stud	7, 10
76699	Screw (10-32 Pilot)	11
76752	Bushing	11
76804	Spring	5
76821	Screw (6-40 Shoulder)	8
77051	Post, Spring	10
77221	Bracket	14
78028	Screw (6-40 x 15/16)	7
78075	Screw (6-40 Pilot)	1
78103	Screw (6-40 x 13/16)	3
78301	Screw (10-32 x 5/8)	4
78551	Shaft	6
78552	Retainer	6
78630	Screw (6-40 x 1/2)	5
80283	Screw (4-40 Shoulder)	9
80294	Post, Spring	1, 9, 11
80342	Screw (6-40 x 23/64)	11, 14
80444	Screw (6-40 x 1/4)	3, 4, 9, 11
80471	Spring	3
80592	Spring, Contact	10
80635	Bushing	10
80706	Screw, set (6-40 x 3/16)	8
80830	Crystal, Red	14
81598	Bushing	11
81599	Bushing, Eccentric	11
81638	Collar	11
82279	Clip, Short	13
82281	Guide	13
82288	Screw (4-40 x1/4)	16
82313	Clip	2, 6
82392	Shim	11
82467	Plate, name	14
82702	Screw (6-40 x 5/32)	14
82711	Scale, 64 oz.	20
82728	Plate, Name	14
82729	Plate, Name	14
82860	Spring	6
83384	Pawl, Back Space	11
83385	Cam, Release	11
83386	Lever, Back Space	11
83413	Knob, Rubber	11
83420	Retainer, Tape	13
83441	Nipple	10
85002	Guide, Plunger	1, 6
85003	Plunger	6
85013	Shaft	7
85014	Gear, 36T	7
85015	Pinion, 4T	7
85016	Bracket	10
85017	Lever, Punch Hammer Operating	12
85019	Roller	12
85020	Screw (10-32 Shoulder)	12
85022	Joint	12
85023	Nut (10-32 Adjusting)	12
85024	Stop plate, shift bail	1, 6
85026	Link	6, 9
85031	Bracket	1
85034	Cable, Lamp	10
85035	Cable, Switch	1
85043	Extension	9
85046	Bushing	9
85048	Pawl	9
85049	Latch	9
85051	Pinion (12T) for 110v. 60 cycle	15
85052	Detent, Shift Bail	6
85055	Spring, Tape Tension	13
85058	Container, Tape	13
85059	Shaft	11
85063	Bracket	7
85065	Hub	7
85067	Pawl, Trip-off	7
85068	Spring	7
85069	Bail, Return	7
85070	Bushing	7
85073	Shaft	7
85077	Pad, right side	14
85078	Pad, rear	14
85082	Keylever—row 4	1
85083	Keylever—row 3	1
85084	Keylever—row 1	1
85085	Keylever—row 2	1
85090	Keylever, function	1
85093	Shaft	6
85094	Guide, keylever-rear	2
85095	Guide, keylever-front	1
85098	Bar, Space	1
85099	Plate, spring-keylever	2
85100	Bracket, lever shift and unshift	1, 6
85103	Bail, shift	2
85104	Bracket, shift	6
85105	Extension, shift bail	6
85106 to 85127	Lever, Counting Code	19
85128	Link, connection	6
85141	Link, counting selector bar (A)	7
85144	Link, counting selector bar (B)	7
85146	Link, counting selector bar (C)	7
85148	Link, counting selector bar (D)	7
85153	Selector bar link #1 and #2	6
85154	Selector bar link #3	6
85155	Selector bar link #4	6
85156	Selector bar links #5 and #6	6
85157	Link bar-universal	6
85160	Guide, right	7
85163	Shaft	7
85164	Bar, counting selector (CA-1)	7
85165	Bar, counting selector (CB-1)	7
85166	Bar, counting selector (CC-1)	7
85167	Bar, counting selector (CD-1)	7
85168	Retainer	7
85169	Shim	6, 7
85170	Lever, counting selector	7
85172	Shaft	7
85174	Bar, perforating selector (A-2)	18
85175	Bar, perforating selector (A-1)	18

NUMERICAL INDEX

Part Number	Part	Page
85176	Bar, perforating selector (B-2)	18
85177	Bar, perforating selector (B-1)	18
85178	Bar, perforating selector (C-2)	6
85179	Bar, perforating selector (C-1)	6
85180	Bar, perforating selector (D-2)	18
85181	Bar, perforating selector (D-1)	18
85182	Bar, perforating selector (E-2)	6
85183	Bar, perforating selector (E-1)	6
85184	Bar, perforating selector (F-2)	18
85185	Bar, perforating selector (F-1)	18
85186	Bar, perforating selector (UB)	6
85188	Lever, shift	6
85190	Lever, unshift	6
85195	Bracket	9
85196	Support, scale	9
85197	Bracket	9
85198	Screw (10-32 x 3/16)	9
85199	Arm, stop	9
85206	Semaphore	9
85213	Bracket	10
85214	Lever, operating	10
85216	Swivel	10
85218	Arm, spring	9
85220	Bracket	9
85223	Pointer, counting	9
85224	Rod, Release	9
85225	Spring	10
85229	Crank, bell	9
85230	Link	9
85233	Shaft	9
85235	Lever, release	10
85236	Link	10
85246	Hub	9
85247	Gear, 75T	9
85248	Bracket	10
85251	Lever, Stop	6, 17
85252	Screw (10-32 Shoulder)	6
85253	Roller	6
85254	Screw (6-40 Shoulder)	6
85255	Latch, Stop Lever	6
85257	Latch, Non-Repeat	6
85260	Bracket	5
85261	Roller	5
85262	Stud	5
85265	Bail, Transfer	7
85266	Shaft	7
85267	Arm, Transfer Bail	7
85268	Bracket, Transfer Bail	5
85269	Bracket, Spring	5, 7
85270	Shaft	7
85276	Support, Zero Lever	5
85279	Support, Zero Lever Bail	5
85281	Shaft, cross and gear	5
85282	Gear, 38T	5
85283	Bail, spacer	9
85284	Shaft	9
85286	Lever, Return Clutch Throw-Out	5
85309	Clutch, Driven	3
85310	Spring	3
85312	Disc, Start	3
85313	Disc, Friction	3, 4
85314	Spring	3, 4
85315	Nut (Special)	3, 4
85316	Cam, Return	3
85317	Pin	3
85320	Gear (75T)	3
85321	Spacer	3
85322	Gear (48T)	3
85324	Disc, Start	4
85325	Spacer	4
85328	Blade, Stop	4
85331	Arm, Drive	4
85333	Bracket	4
85334	Disc, Fulcrum	4
85335	Disc, Guide	4
85336	Disc, Guide	4
85337	Disc, Code #1	4
85338	Disc, Code #2	4
85339	Disc, Code #3	4
85340	Disc, Code #4	4
85341	Bushing	4
85342	Spacer	4
85343	Washer	4
85344	Stud	4
85345	Guide, Index Pin	4
85346	Shaft	4
85347	Plunger, Stop Pin	4
85348	Plate, Cover	4
85349	Disc, Spring	4
85350	Bracket, Punch Unit	11
85351	Post, Spring	11
85354	Plate, Bearing	11
85355	Plate	11
85357	Bracket	11
85361	Lever, Vertical #0 & #5	12
85362	Lever, Vertical #1 & #4	12
85363	Lever, Vertical #2 & #3	12
85364	Lever, Punch	12
85366	Guide, Tape	11
85368	Spring, Tape Guide	11
85371	Hammer, Punch	12
85372	Pawl, Feed	11
85373	Shaft	12
85376	Spring, Keylever	2
85471	Screw (10-32 x 1/2)	5
85754	Arm, Latch	9
85755	Screw (3/8-32 Pilot)	2
85756	Bracket, unshift	6
85760	Scale, Sliding Indicator	9
85762	Washer	9
85767	Bearing	9
85772	Bail, Detent	12
85773	Roller	12
85774	Screw (10-32 Pilot)	11
85775	Screw (10-32 Pilot)	11
85776	Lever, Punch Control	11
85777	Link	11
85778	Bail, Punch Control	11
85779	Plate, Clamp	11
85780	Plate, Locating	1, 2
85782	Guide	6
85784	Roller	5
85785	Bearing, Cross Shaft	5
85787	Lever, Zero	5
85788	Collar	5
85789	Guide, center	7
85792	Bushing	6
85793	Stud	5
85795	Plate, guide	5
85798	Plate	11
85800	Shim	2
85802	Sleeve, Cam	3
85803	Spacer	3
85804	Shaft (with Clutch Driver)	3
85805	Spring	4
85806	Lever, Repeat Key	5, 6
85807	Spacer	14
85811	Upstop	2
85814	Plate, Stop	14
85827	Keylever, space	1, 6
85917	Bearing	5, 9
85931	Post, Spring	5, 6
85934	Screw (1/4-32 Pilot)	11
85935	Post, Spring	5
85936	Post	10
85937	Insulator	10
85947	String	9
85957	Spacer	9
85966	Bracket	8
85967	Post, spring	8
85968	Screw (6-40 Thumb)	8
85969	Block, adjusting-pivot	8
85970	Washer, spring	8
85971	Spacer	8
85972	Nut (6-40 Hex.)	8
85973	Lever	8
85976	Spacer	8
85977	Slide, space rack	8
85980	Rack, spacing	8, 9
85981	Rack, pointer-right	8
85982	Rack, pointer-left	8
85985	Bracket	8
85986	Pawl, retaining	8
85993	Stud	8
85994	Pointer, right	8
85995	Pointer, left	8
85996	Segment, pointer	8
85997	Spacer	8
85998	Cam	8
85999	Post	8
86007	Detent	7
86023-2	Door w/Hinge	14
86025	Pad, top	14
86028 to 86030	Lever, Counting Code	19
86081	Shaft, worm-R. H.	4
86087	Spring, Garter	4
86090	Collar, Reset	4
86091 to 86102	Lever, Counting Code	19
86103	Bail, Zero Lever	5
86106	Lever, counting code	19
86203	Post	9
86204	Lug, Reset	1
86205	Guide	1
86206	Plate	1
86209	Stud	5
86214	Collar, Adjusting	9, 10
86215	Lever, Collar Reset	5
86216	Screw (4-40 Shoulder)	9
86219 to 86247	Lever, Counting Code	19
86252	Link, Vertical	9
86253	Lever, release	9, 10
86273	Spring	11, 12
86278	Hub	4
86279	Gear	4
86290 to 86295	Lever, Counting Code	19
86296	Spring	7
86303	Bracket	7
86304	Spring	4
86308	Screw, Clamping (10-32 x 4 3/16)	16
86309	Bushing, Outlet (60 Cycle)	16
86311	Rotor (with Cut-out Switch) (60 Cycle)	16
86314	Washer, Steel	16
86320	Screw (8-32 x 1 1/16)	16
86322	Bearing, Ball (Both Ends)	16
86323	Nut (7/16-24 R.H.)	16
86324	Nut (7/16-24 L.H.)	16
86325	Switch, Cut-out (with 86326 Springs) (60 Cycle)	16
86326	Spring	16
86327	Bushing (Fibre)	16
86329	Screw (4-40 x 7/16)	16
86340	Wrench, Capstan	20
86341	Screw (10-32 x 3/16)	5, 7
86524	Shaft	7
86534	Clamp	6
86559	Plate, retaining (end)	2
86560	Plate, retaining (center)	2
86561	Clamp	2
86738	Plate, Support	5
86739	Screw (6-40 x 1/4 Special)	5
86740	Screw (4-40 x 3/16)	5
86746	Screw (6-40 Shoulder)	6
86755	Plate, bottom	2
86774	Screw (6-40 Shoulder)	10
86848	Grommet, Rubber (60 Cycle)	16
87182	Disc, Celluloid	6
87494	Bracket, Clutch Arm	5
87636	Screw (2-56 x 3/16)	14
87697	1/2"-3/4" Wrench, Open End	20
87942	Bracket	7
87943	Bracket, selector bar	6
88693	Bracket, Roller	14
88699	Bushing, Eccentric	7
88749	Sleeve, Bearing	4
88750	Nut Bearing (3/16-40 Special)	4
88751	Washer, Slotted	4
88753	Washer	4
88754	Shaft	4
88803	Spring	8
88976	Screw (6-40 Shoulder)	8
88994	Foot	2
88995	Post, Bearing	1
88996	Loop	1
88997	Bar, cross	1
88999	Lever, actuating-return	7
89000	Extension	7
89003	Keylever, carriage return (1)	1, 7
89004	Clamp, cable	1
89005	Screw (6-40 Shoulder)	7
89394	Wheel, Star	11
89395	Nut (3/32-40 Hex.)	11
89408	Bushing	6
89431 to 89436	Lever, Counting Code	19
89462	Gear (40-T) for 110v. 50 cycle	3
89463	Pinion (12-T) for 110v. 50 cycle	15
89478	Base, w/hardware	5
89896	Cup, Oil	4
89897	Nut, Oil Cup (10-32 Hex.)	4
89900	Lever, counting code	19
89954	1/4" Wrench, Socket	20
89955	5/16" Wrench, Socket	20
89982	Oiler	3, 4
89985	Cap, Oiler	3, 4
89986	Washer, Oiler	3, 4
89987	Wick, Oil	4
90490	Shim	15
90951	Washer, Lock	16
91115	Motor Cable (Assy.)	1, 12
91682	Lever, counting code	19
91683	Nut (13/32-32 Hex.)	1
91741	Guide	6
92468	Washer, felt	16
92470	Washer, Cup (Fibre)	16
92754	Pawl, space	9
92757	Screw (6-40 eccentric)	9
92759	Rod, spacer	9
92853	Cord, A.C.	12
92854	Plug, A.C.	12
93063	Bar, perforating selector (C-1C)	18
93064	Bar, perforating selector (C-2C)	18
93065	Bar, perforating selector (E-1C)	18

NUMERICAL INDEX

Part Number	Part	Page
93066	Bar, perforating selector (E-2C)	18
93075	Nut (15/32-32 Ring)	1
93108	**Lock Washer**	**16**
93443	Post, spring	9
93715	Switch and cable (assem.)	1
93811	Gauge, Wire (.030")	20
93822	Gauge, Flat (.004")	20
93823	Gauge, Flat (.005")	20
93824	Gauge, Wire (.018")	20
93825	Gauge, Wire (.025")	20
93827	Gauge, Wire (.055")	20
93828	Gauge, Wire (.012")	20
93833	Gauge, Flat (.003")	20
93893	Bushing, Bronze	5
94558	Base	16
94560	Shield (end)	16
94561	Stator (with Winding) (60 Cycle)	16
94562	Spring, Trunnion	16
94565	Screw (8-32 x 11/32)	16
94566	Screw (8-32 Shoulder)	16
95013	Lever, Counting Code	19
95123	Lever, Counting Code	19
95268 to 95272	Lever, Counting Code	19
95585 to 95588	Lever, Counting Code	19
96340	Spring	6
96356	Gauge, Wire (.002")	20
96358	Gauge, Flat (.002")	20
96360	Gauge, Flat (.006")	20
96362	Gauge, Flat (.007")	20
96364	Gauge, Flat (.010")	20
96369	Gauge, Wire (.006")	20
96371	Gauge, Wire (.008")	20
96373	Gauge, Wire (.010")	20
96375	Gauge, Wire (.015")	20
96377	Gauge, Wire (.020")	20
96383	Guage, Wire (.035")	20
96385	Gauge, Wire (.040")	20
96389	Gauge, Wire (.045")	20
96391	Gauge, Wire (.050")	20
96393	Gauge, Wire (.060")	20
96399	Gauge, Wire (.065")	20
96401	Gauge, Wire (.070")	20
96403	Gauge, Wire (.075")	20
96405	Gauge, Wire (.080")	20
96593	Chute, Chad	12
98136	Gauge, Wire (.037")	20
98154	Hinge	14
101398	Switch, Cut-out (with 101399 Springs) (25 Cycle)	16
104702	Screw (4-40 x 7/16)	5
105435	Bracket and Rod	14
105918	Spacer	16
110435	Nut (4-40 Hex.)	5, 6, 9
110437	Spring	9
110442	Driver, Screw	20
110443	Scale, 8 oz.	20
110444	Scale, 32 oz.	20
112621	Screw, shoulder (4-40 x 1/2)	6
112622	Screw (4-40 Shoulder)	9
112625	Screw (6-40 Shoulder)	9
112626	Nut (10-32 Hex.)	6, 7, 11, 12
112627	Nut (2-56 Hex.)	13, 14
112630	Spring	9, 11
112634	Spring	12
112645	Block, Punch	11
113947	Insulator	16
115733	Copyholder (Assy.)	14
117375	Case (with Gauge Holder and Lifter)	20
117781	Kit, Gauge	20
119647	Ring, retaining	6
119652	Retainer	13, 17
119655	Retainer	13
119737	Rotor (Assy.) (with Bearing and Switch) (25 Cycle)	16
119738	Rotor (with Cut-out Switch) (25 Cycle)	16
119740	Bushing, Outlet (25 Cycle)	16
119741	Stator (with Winding) (25 Cycle)	16
119783	Cover, Punch Unit—Upper	12
119784	Cover, Punch Unit—Lower	12
119785	Box, Chad	12
119930	Washer, spring	16
119931	Washer, steel	16
121243	Clamp	14
121995	Lever, Tape Tension	11
122824 to 122828	Lever, Counting Code	19
123311 to 123313	Lever, Counting Code	19
123581	Knife, Tape	11
123601	Bar, perforating selector (A-1D)	18
123602	Bar, perforating selector (A-2D)	18
123603	Bar, perforating selector (B-1D)	18
123604	Bar, perforating selector (B-2D)	18
123607	Bar, perforating selector (D-1D)	18
123608	Bar, perforating selector (D-2D)	18
123722	Cap, bearing	5
123726	Bar, perforating selector (C-1F)	18
123727	Bar, perforating selector (C-2F)	18
124765	Base, motor	15
124935	Core	13
124936	Filler, Wood	13
125005	Screw (2-56 x 3/16)	13
125011	Washer	6, 7, 11, 14
125012	Socket	10
125119	Screw (4-40 Shoulder)	9
125123	Screw (4-40 x 1/2)	6
125124	Screw (4-40 Shoulder)	9
125125	Screw (4-40 Shoulder)	8
125126	Screw (2-56 x 3/32)	9
125148	Screw (4-40 Shoulder)	6
125152	Screw (6-40 Pilot)	5
125171	Screw (10-32 x 1/2)	13
125177	Screw (1/4-32 Pilot)	11
125218	Nut (1/4-32 Hex.)	11
125229	Nut (6-32 Hex.)	13
125235	Nut (4-36 Hex.)	14
125250	Spring	10
125260	Spring	5, 6
125307	Washer	6
125490	Roll, Feed	11
125683	Bushing, Eccentric	11
125686	Detent	11
125698	Roller	6
125752	3/16" Wrench, Screw Driver Socket	20
125757	7/16" Wrench, Socket	20
125763	3/16"-1/4" Wrench, Open	20
125775	3/8"-7/16" Wrench, Open	20
125776	5/16" Wrench, Open	20
125783	Stone, Carborundum	20
125789	Shim	5
132063	Plate, Feed Pawl Deflecting	11
132124	Induction Motor	15
132136	Screw (6-40 Shoulder)	6
132154	Spring	9
132155	Stop Spring	9, 10
132156	Nut (Assem.)	9
132163	Transformer, w/bracket	14
132164	Veeder-Root line counting assembly w/plug	14
132166	Lamp, 30 volts (used with line counter)	10
132167	Plug	14
132168	Socket	14
132169	Cable	14
132170	Cable	14
132171	Bracket	14
132172	Contact Assembly	14
132189	Lamp, 130 volts	10
132190 to 132200	Lever, Counting Code	19
132203 to 132206	Lever, Counting Code	19
132208	Washer, Felt	3, 4
132210	Washer, Felt	4
132227	Contact Assembly	14
132248	Screw, Shoulder	13
132249	Cover, Assembly	13
132252	Container, Assembly	13
132254	Hub	13
132256	Stud	13
132349	Spring Tape Tension	13
132365	Pin	17
132366	Shaft	17
132367	Armature	17
132368	Magnet Assembly	17
132369	Bracket	17
132371	Hairpin Clip	17
132373	Trip Arm Assembly	17
132375	Bracket	17
132380	Shield	17
132382	Shaft	17
132383	Cable	17
132385	Spring Bracket	1
132386	Capacitor, 40 m.f.d., 250 volts	17
132396	Resistor, fixed, 56 ohms, 1 watt	17
132397	Capacitor, 2 m.f.d., 200 volts, 1 watt	17
132398	Resistor, fixed, 330K, 1 watt	17
132399	Resistor, 1500 ohms, 1 watt	17
132403	Shims	17
132413	Down Stop Assembly	17
132445	Spring	2
132476 to 132507	Lever, Counting Code	19
132536 to 132584	Lever, counting Code	19
132593	Rectifier, 65 m.a., D.C., 120 volts A.C.	17
132749	Screw, Brass	17
132869	Plunger	17
132876	Bracket, mounting	17
132877	Screw (6-40 Adjusting)	6
132878	Cable	17
132883	Grommet	17
132887	Electrical Clutch Mechanism Assembly	17
132890	Contact Pile Up Assembly	17
132892	Push Rod Linkage Assembly	17
140289	Split Ring Assembly with 55318 Screws	16
140591	Spacer	15
140592	Insert	15
140593	Wire, Lock	15
140745	Foot, Rubber	2
AN500A416-12	Screw	15